
ROWLINSON GARDEN PRODUCTS LIMITED
Green Lane
Wardle, Nr. Nantwich
Cheshire, CW5 6BN
email: support@rowgar.co.uk
Help Line (Normal Office Hours) 01829 261 121

Rectangular Planter & Lattice

English SS064B


Assembly Instructions

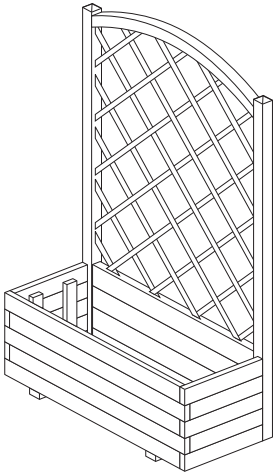

Biocidal Products Regulation EU 528/2012
Wolmanit® CX treated wood, is a treated article incorporating biocidal products: copper hydroxide carbonate, bis(N-cyclohexyl-diazenium-dioxy)-copper and Boric Acid. They protect wood against fungal decay, rot and insect attack. Wear gloves when handling freshly treated wood. Avoid breathing dust when cutting wood. Dispose of off-cuts responsibly.

Before assembly

- We recommend that time is taken to read the instructions before starting assembly, then follow the easy step by step guide. The instruction sheet is only a guide to the assembly. Certain items may not be shown to scale.
- Check all components prior to assembly
- This product should be assembled by no less than two people.
- Drill pilot holes for each screw.
- Never attempt to erect the assembly in high winds.




Recommended tools for assembly

- Power Drill/Screwdriver
- Cross-head driver bit
- 3mm diameter drill bit

No.	Components	Qty.
1	Back Lattice panel	1
2	Left side panel	1
3	Right side panel	1
4	Front panel	1
5	Floor	1

No.	Fixing Kit	Qty.
6	80mm screws	6
7	60mm screws	10
8	40mm screws	4

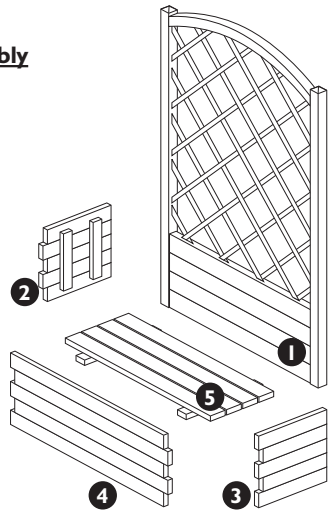


1. Sides to front panel

Interlock the front panels with the two side panels as shown. Secure together using 10 x 60mm screws per side panel.



Drill pilot holes in the side panels with a 3mm drill bit for each screw.

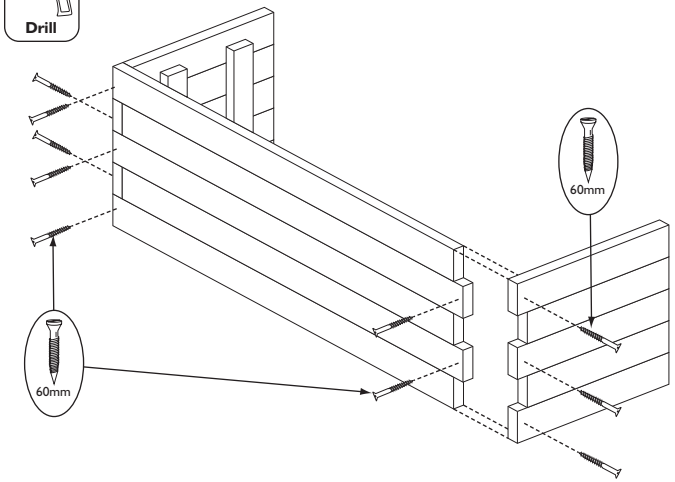

2. Back panel to sides

Position the back panel against the ends of the side panels and secure in place using 6 x 80mm screws. Screw through the back panel into the ends of the sides panels.




Drill pilot holes in the back panel with a 3mm drill bit for each screw.

3. Floor panel

Lay the planter on its back, secure the floor panel in place using 4 x 40mm screws. Screw through the floor bearers into the bottom of the front and back wall.



Drill pilot holes in the side panels with a 3mm drill bit for each screw.

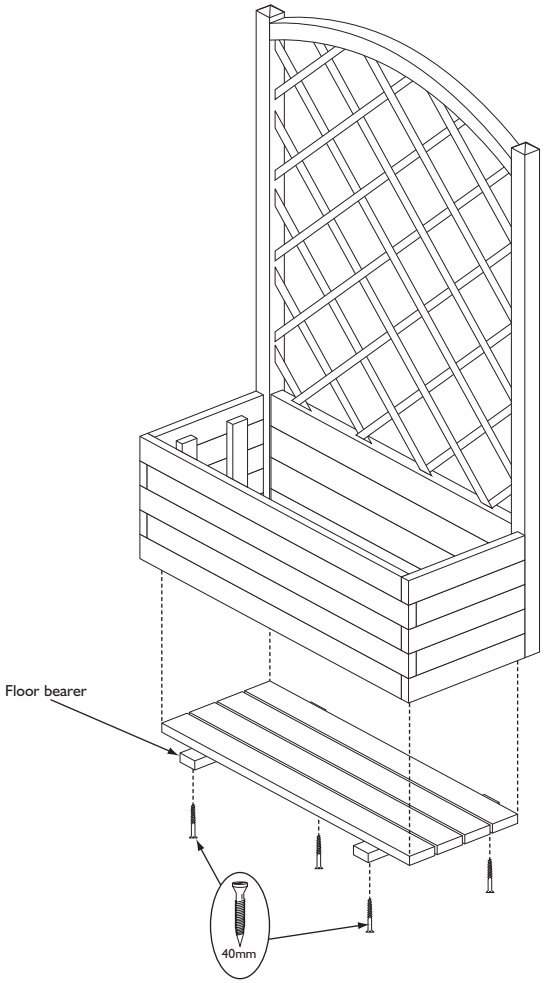

We constantly improve the quality of our products, occasionally the components may differ from the components shown and are only correct at time of printing. We reserve the right to change the specification of our products without prior notice.

2023 © Rowlinson Garden Products Ltd