
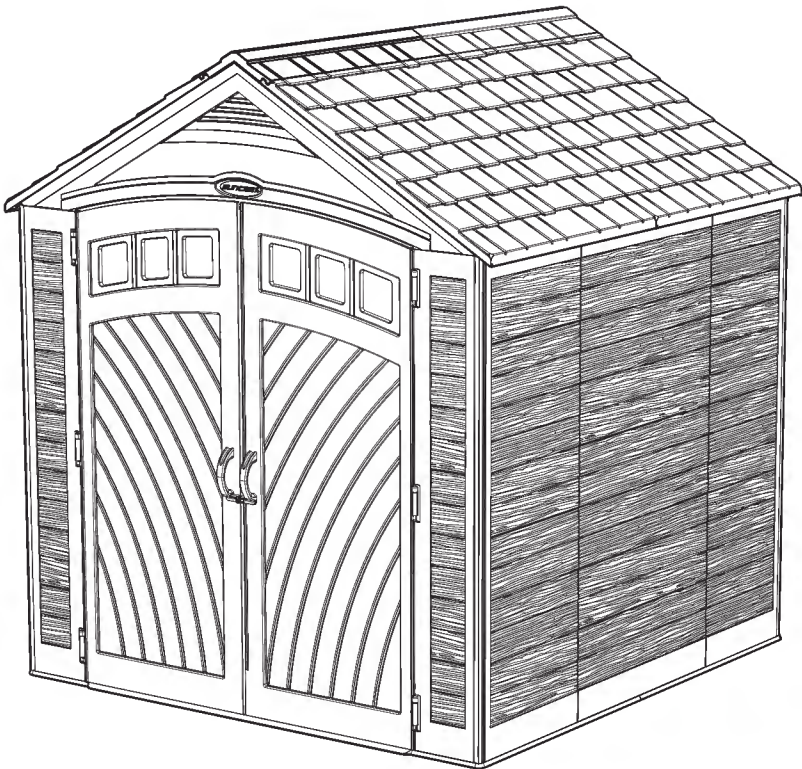


BMS7705 Vista™ Storage Shed

ASSEMBLY INSTRUCTIONS

Tools Required

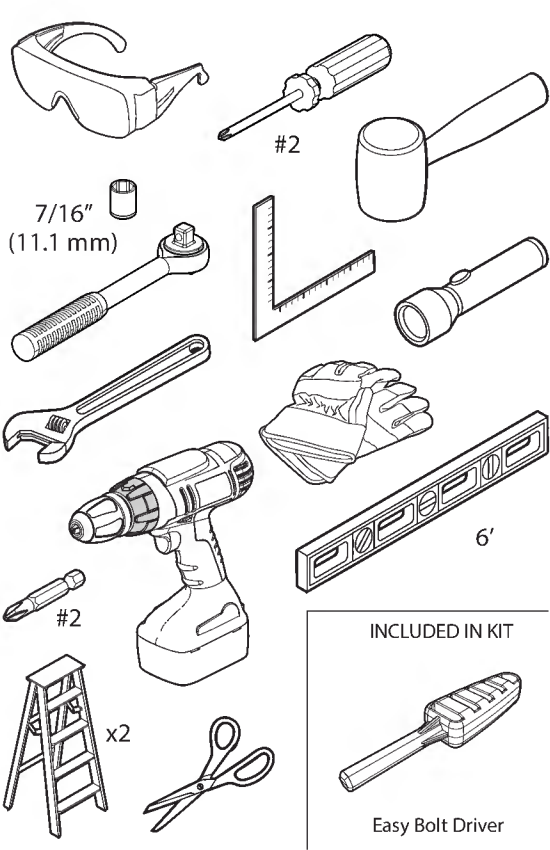

suncast®

Built for Everyday Life™

Thank you for purchasing this Suncast® product.

Register within 90 days of purchase to activate Warranty!

Registration is not required for products with a warranty term of 90 days or less.

1. Verify warranty term of your product by visiting **[www/suncast.com/warranty](http://www.suncast.com/warranty)** (products with a warranty term of 90 days or less do not require registration)
2. Complete registration: fill out the form and upload a copy of your receipt by visiting **<https://support.suncast.com>** or scanning the QR code



Have Questions?

For product questions, assembly assistance, replacement parts and more:



<https://support.suncast.com>



Suncast Corporation Customer Care
701 N. Kirk Road, Batavia, IL 60510



1-800-846-2345
1-630-381-6309



Before you Begin...

- **Consult your local authorities for any permits required to construct shed.**

Prior to the construction of your shed, check with the local building code official to review any required permits or building limitations.

- **A level and sturdy foundation is required before shed construction can begin.**

Site preparation information is available later in this manual. A foundation that differs from the specifications within this manual could prevent proper assembly and may damage parts.

- **Read instructions thoroughly prior to assembly.**

This kit contains parts that can be damaged if assembled incorrectly or in the wrong sequence.

- **Please follow instructions.**

Suncast is not responsible for replacing parts lost or damaged due to incorrect assembly.



Indicates at least 1 additional adult is needed to complete this step.



Indicates caution is recommended when using a power drill.

IMPORTANT

IF FOUNDATION IS REQUIRED, COMPLETE SITE PREPARATION AND FOUNDATION CONSTRUCTION BEFORE UNPACKING ALL PARTS.

OPEN ALL BOXES FIRST AND NEATLY LAYOUT PARTS. SMALL PARTS MAY BE CONTAINED IN EACH BOX. PLEASE REFERENCE THE PARTS LIST WITHIN THIS MANUAL TO VERIFY ALL PARTS ARE PRESENT.



Caution

- Power tools can apply excessive torque resulting in damage to the product. If you choose to use a power drill to assemble the product, Suncast recommends using a variable speed, cordless drill with a variable clutch set at the lowest setting. A #2 Phillips driver bit is compatible with the hardware provided. Suncast makes no guarantee that following this recommendation will prevent damage to the product. Damage to parts due to over-torque are not covered under Suncast's limited warranty.
- Proper site preparation is required.
- Shed not intended for storage of flammable, caustic or corrosive materials.
- Shed not intended for habitation or for use by children.
- **DO NOT** stand, sit, or store items on the storage shed roof.
- **DO NOT** place near objects that are hot or can become hot.
- Heavy articles should not be leaned against the walls, as this may cause panel distortion and permanent damage.
- Suncast is not responsible for damage caused by weather or misuse.
- This kit contains parts with sharp edges. Please be careful when handling, use of work gloves is recommended.
- **WHEN DRILLING THROUGH METAL**, beware of burrs, shavings and other sharp edges. Safety glasses are strongly recommended.
- **DO NOT** place in areas near highly reflective surfaces (Note: Low-E windows are more reflective than standard windows and may affect the longevity of the product).
- Product is water resistant and now waterproof. Locate unit away from gutter and down spouts for optimal performance.



Care & Maintenance

- At regular intervals, inspect your shed to make sure that assembly integrity has been maintained. **Repair or replace broken parts immediately.**
- Periodically check that the location you have chosen to set your shed is still level.
- Keep roof clean of snow and leaves.
- To maintain the look of your product, we recommend cleaning it at regular intervals with mild soap and water. **DO NOT** use bleach, ammonia, or other caustic cleaners, and **DO NOT** use stiff bristle brushes. Failure to perform cleaning at regular intervals could result in permanent staining of the plastic. This type of damage is not covered under warranty.



Assembly Day Tips

- **DO NOT** attempt to assemble on a day with strong winds.
- Set aside appropriate amount of time to completely assemble shed. An incomplete shed assembly may pose a safety hazard.
- Make sure you have assistance nearby to lift and secure parts in place.
- Once roof is assembled, a flashlight may be of use when assembling smaller components inside shed.
- **DO NOT** use a torque wrench or hand drill to tighten Easy bolts. Use provided Easy Bolt Driver ONLY.
- Suncoast provides extra hardware for small fasteners for customer convenience. In some cases, there will be extra small fasteners once the assembly is complete.



Note: *This product contains parts that are used in different orientations to construct the shed. Please take note of the orientation of the parts shown throughout this instruction manual. Failure to follow instructions could result in damage to parts. Suncoast is not responsible for replacing parts lost or damaged due to incorrect assembly.*

Parts - Walls and Floors


IMPORTANT

COMPLETE SITE PREPARATION AND FOUNDATION CONSTRUCTION BEFORE UNPACKING ALL PARTS.



OPEN ALL BOXES FIRST AND NEATLY LAYOUT PARTS. SMALL PARTS MAY BE CONTAINED IN EACH BOX. PLEASE REFERENCE THE PARTS LIST WITHIN THIS MANUAL TO VERIFY ALL PARTS ARE PRESENT.

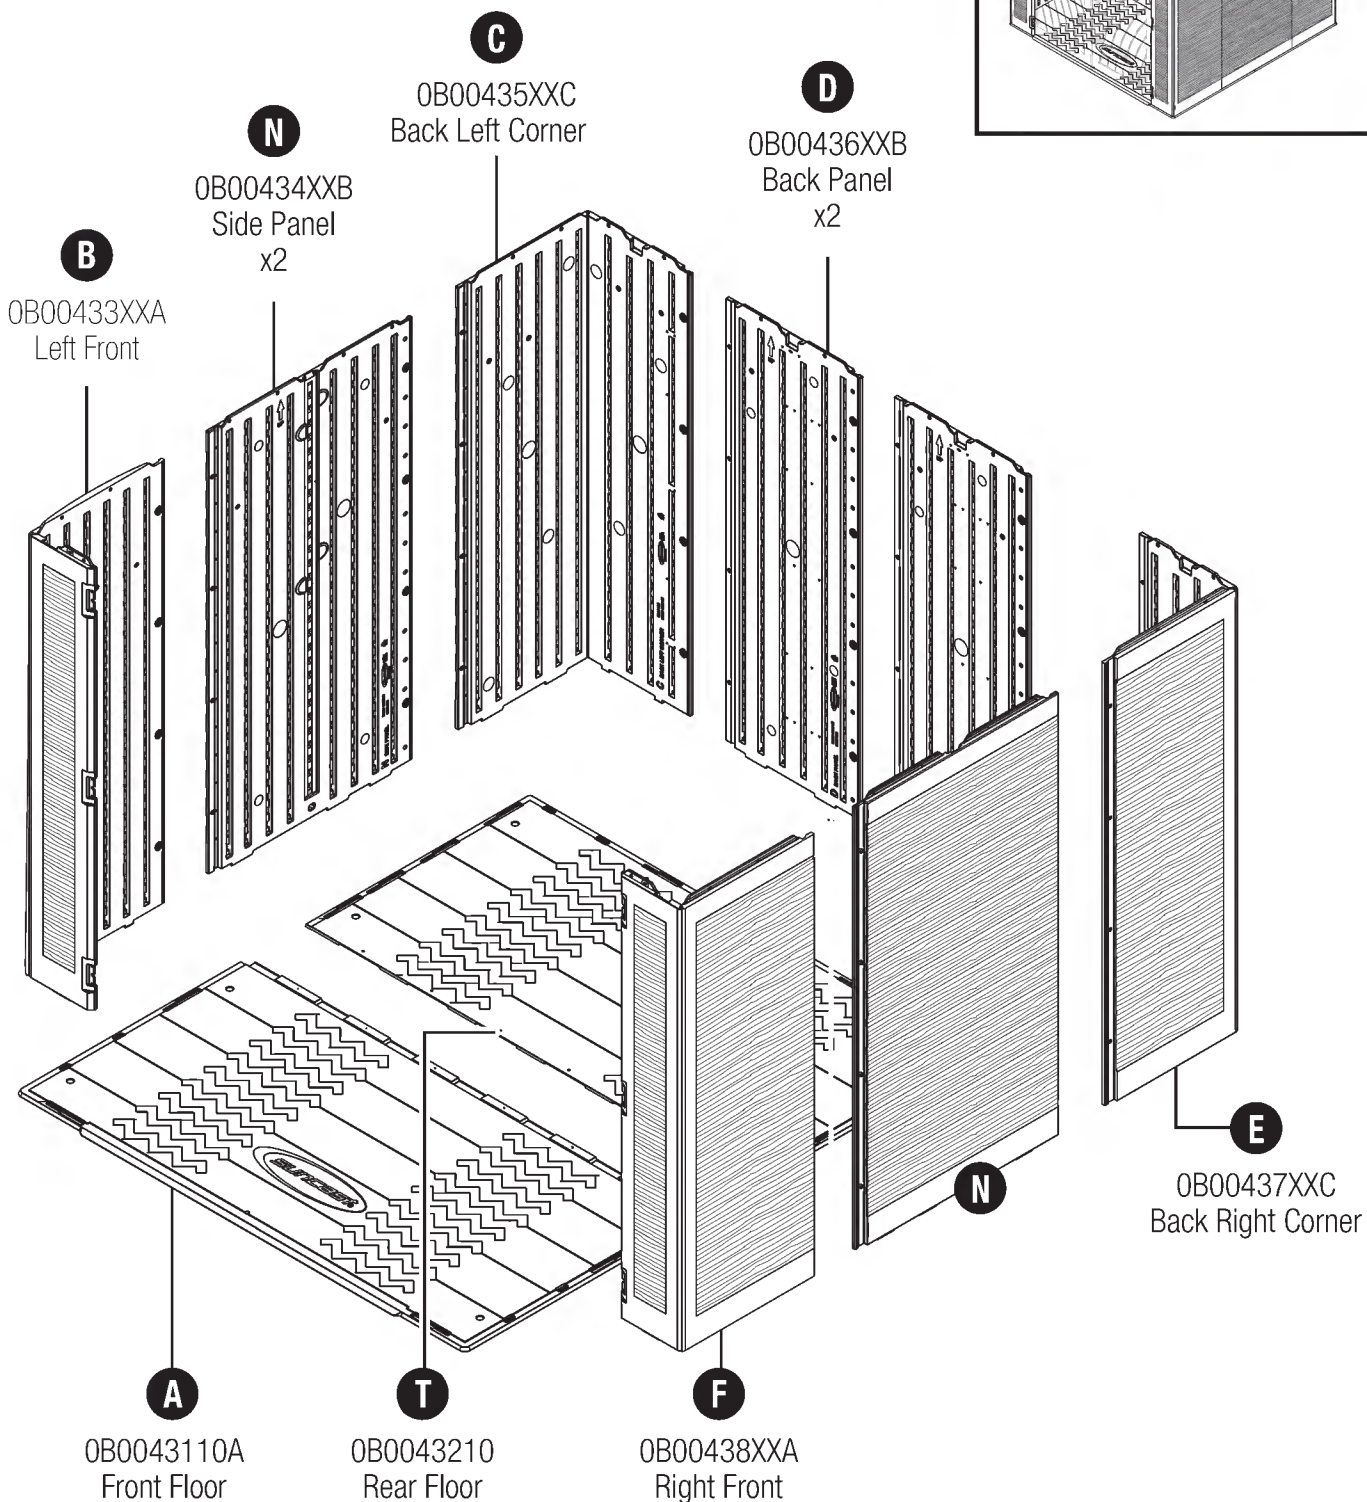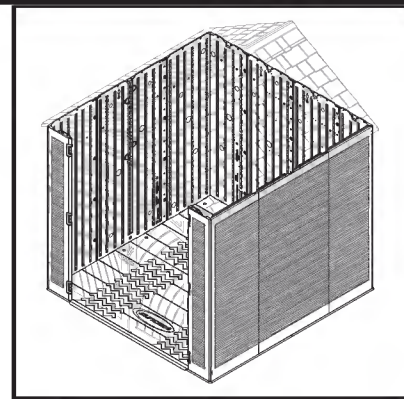



Parts - Doors

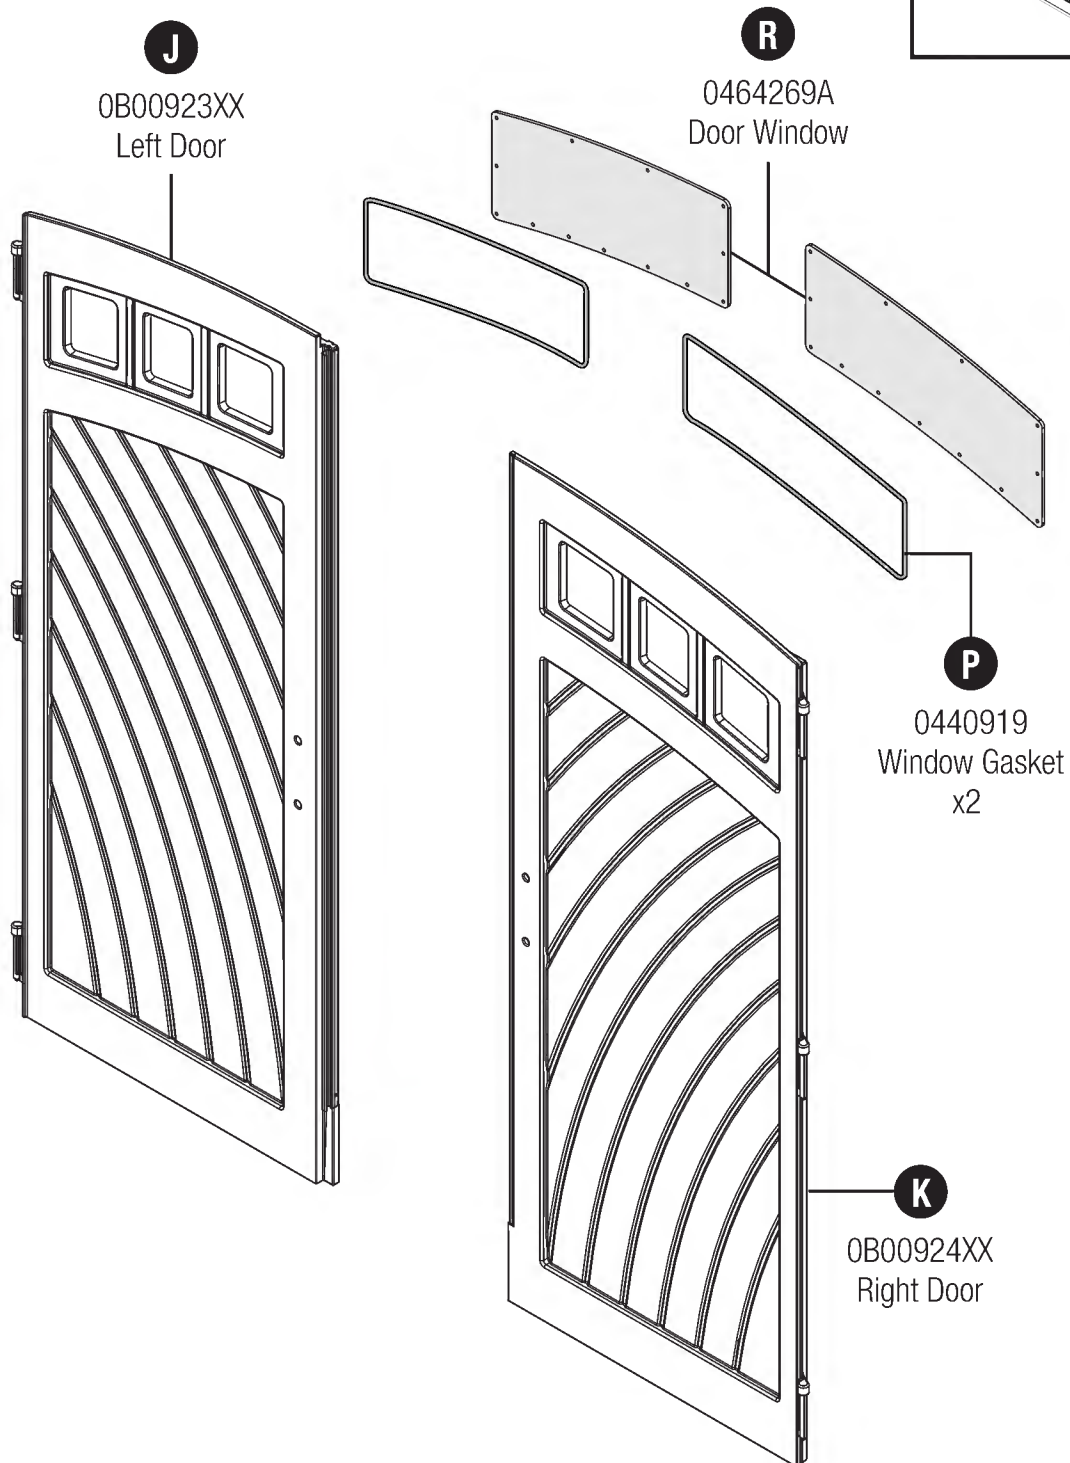


Parts - Headers

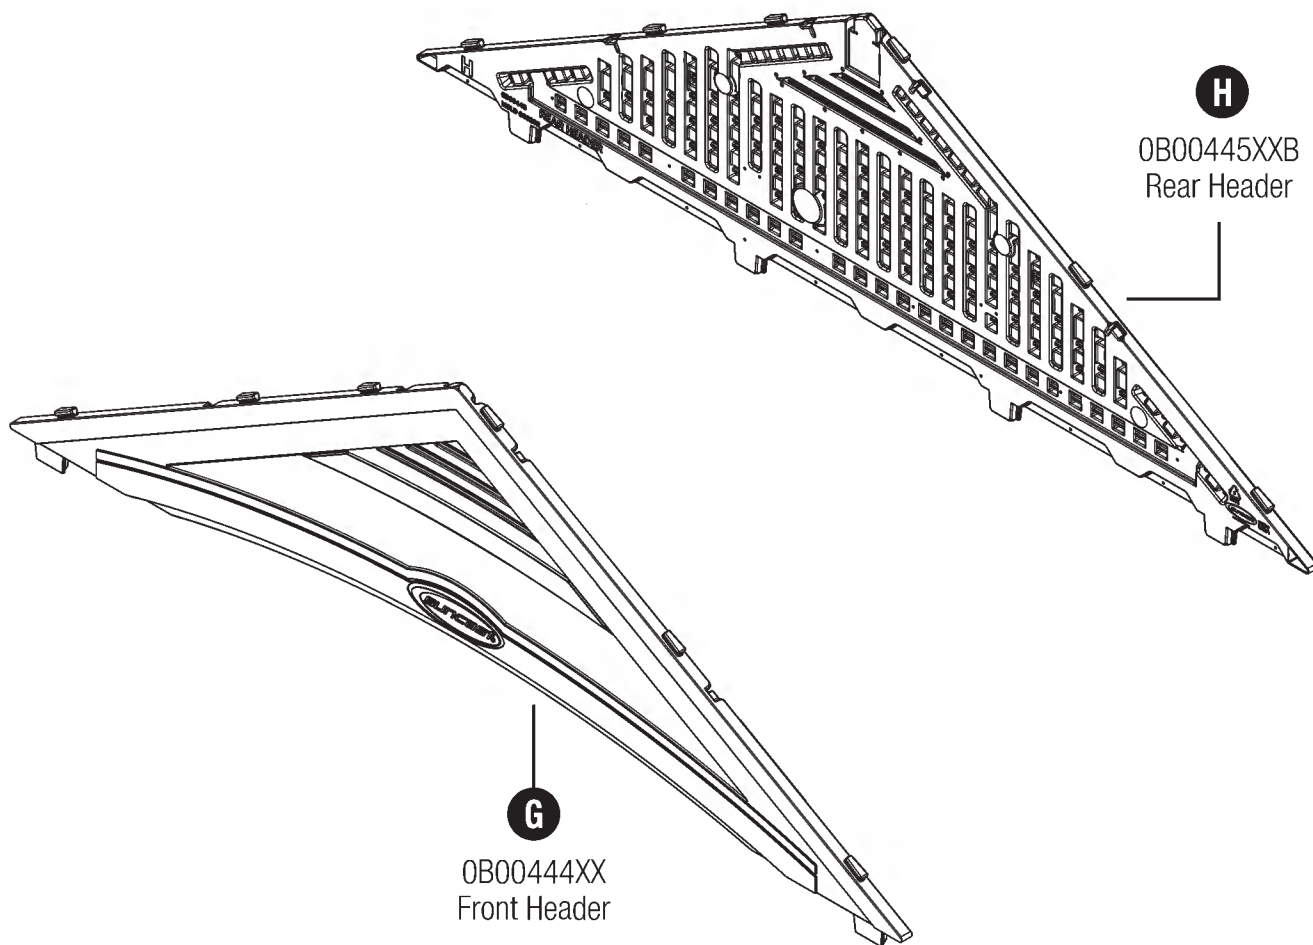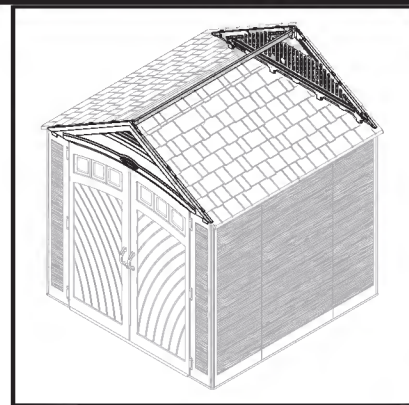

Parts - Roof

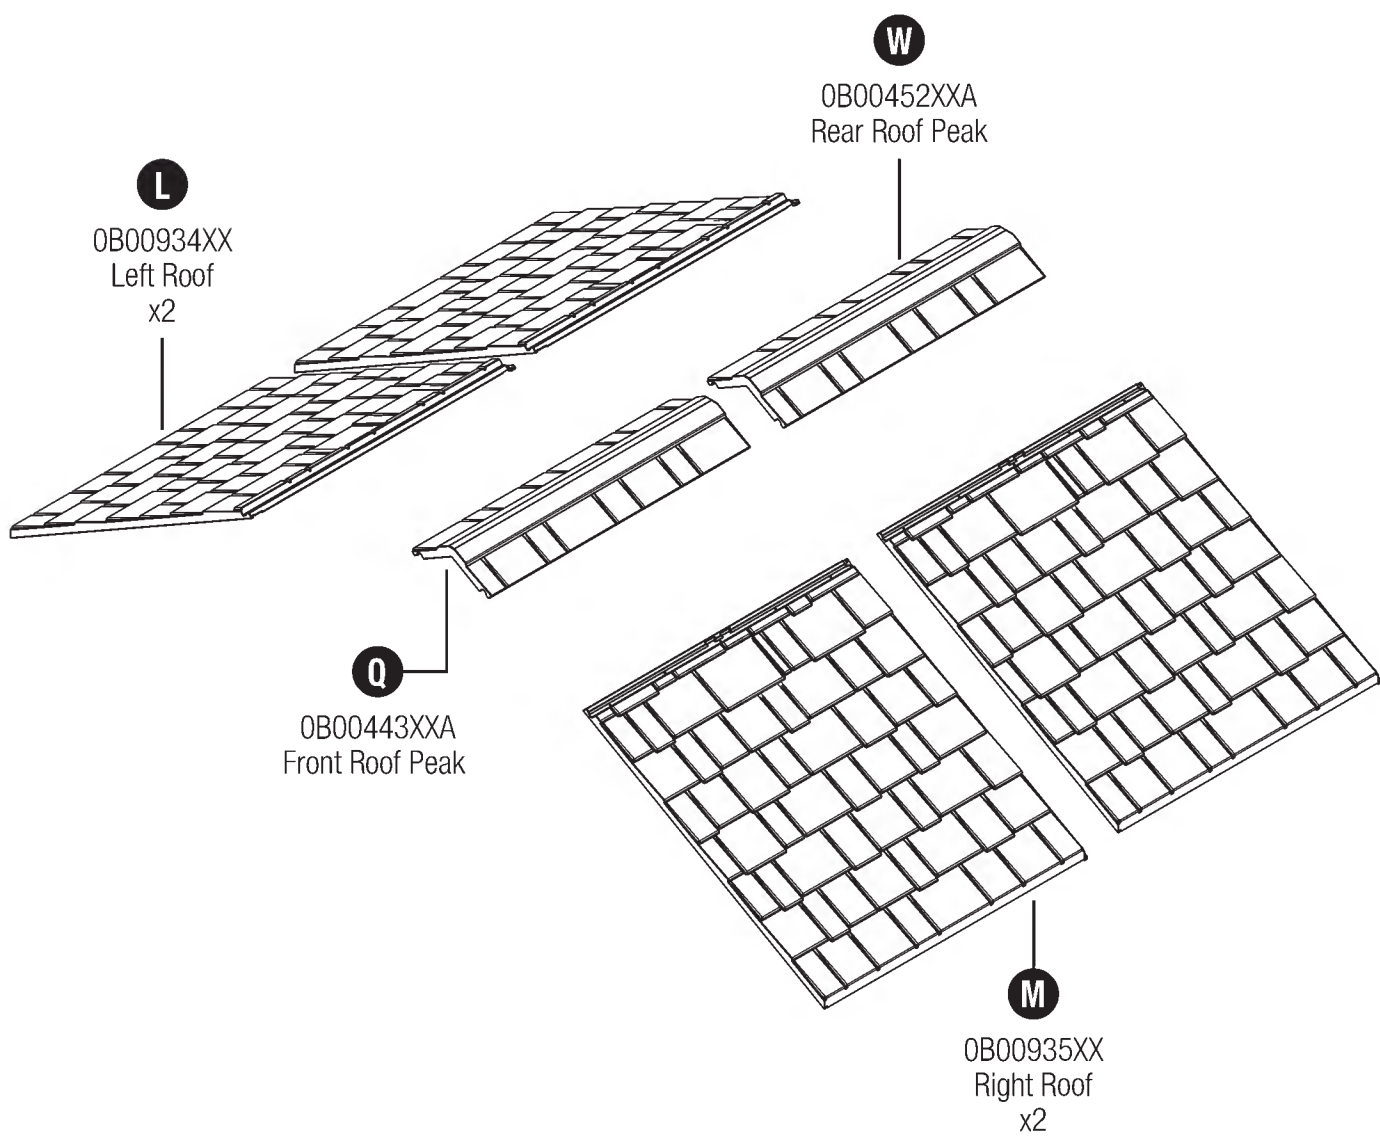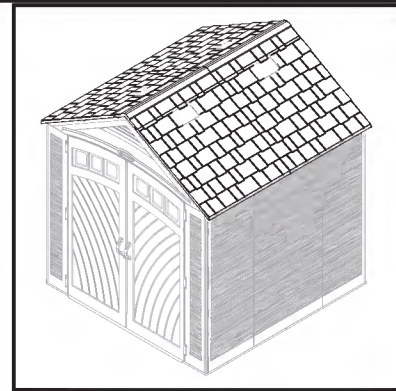


Parts - Steel

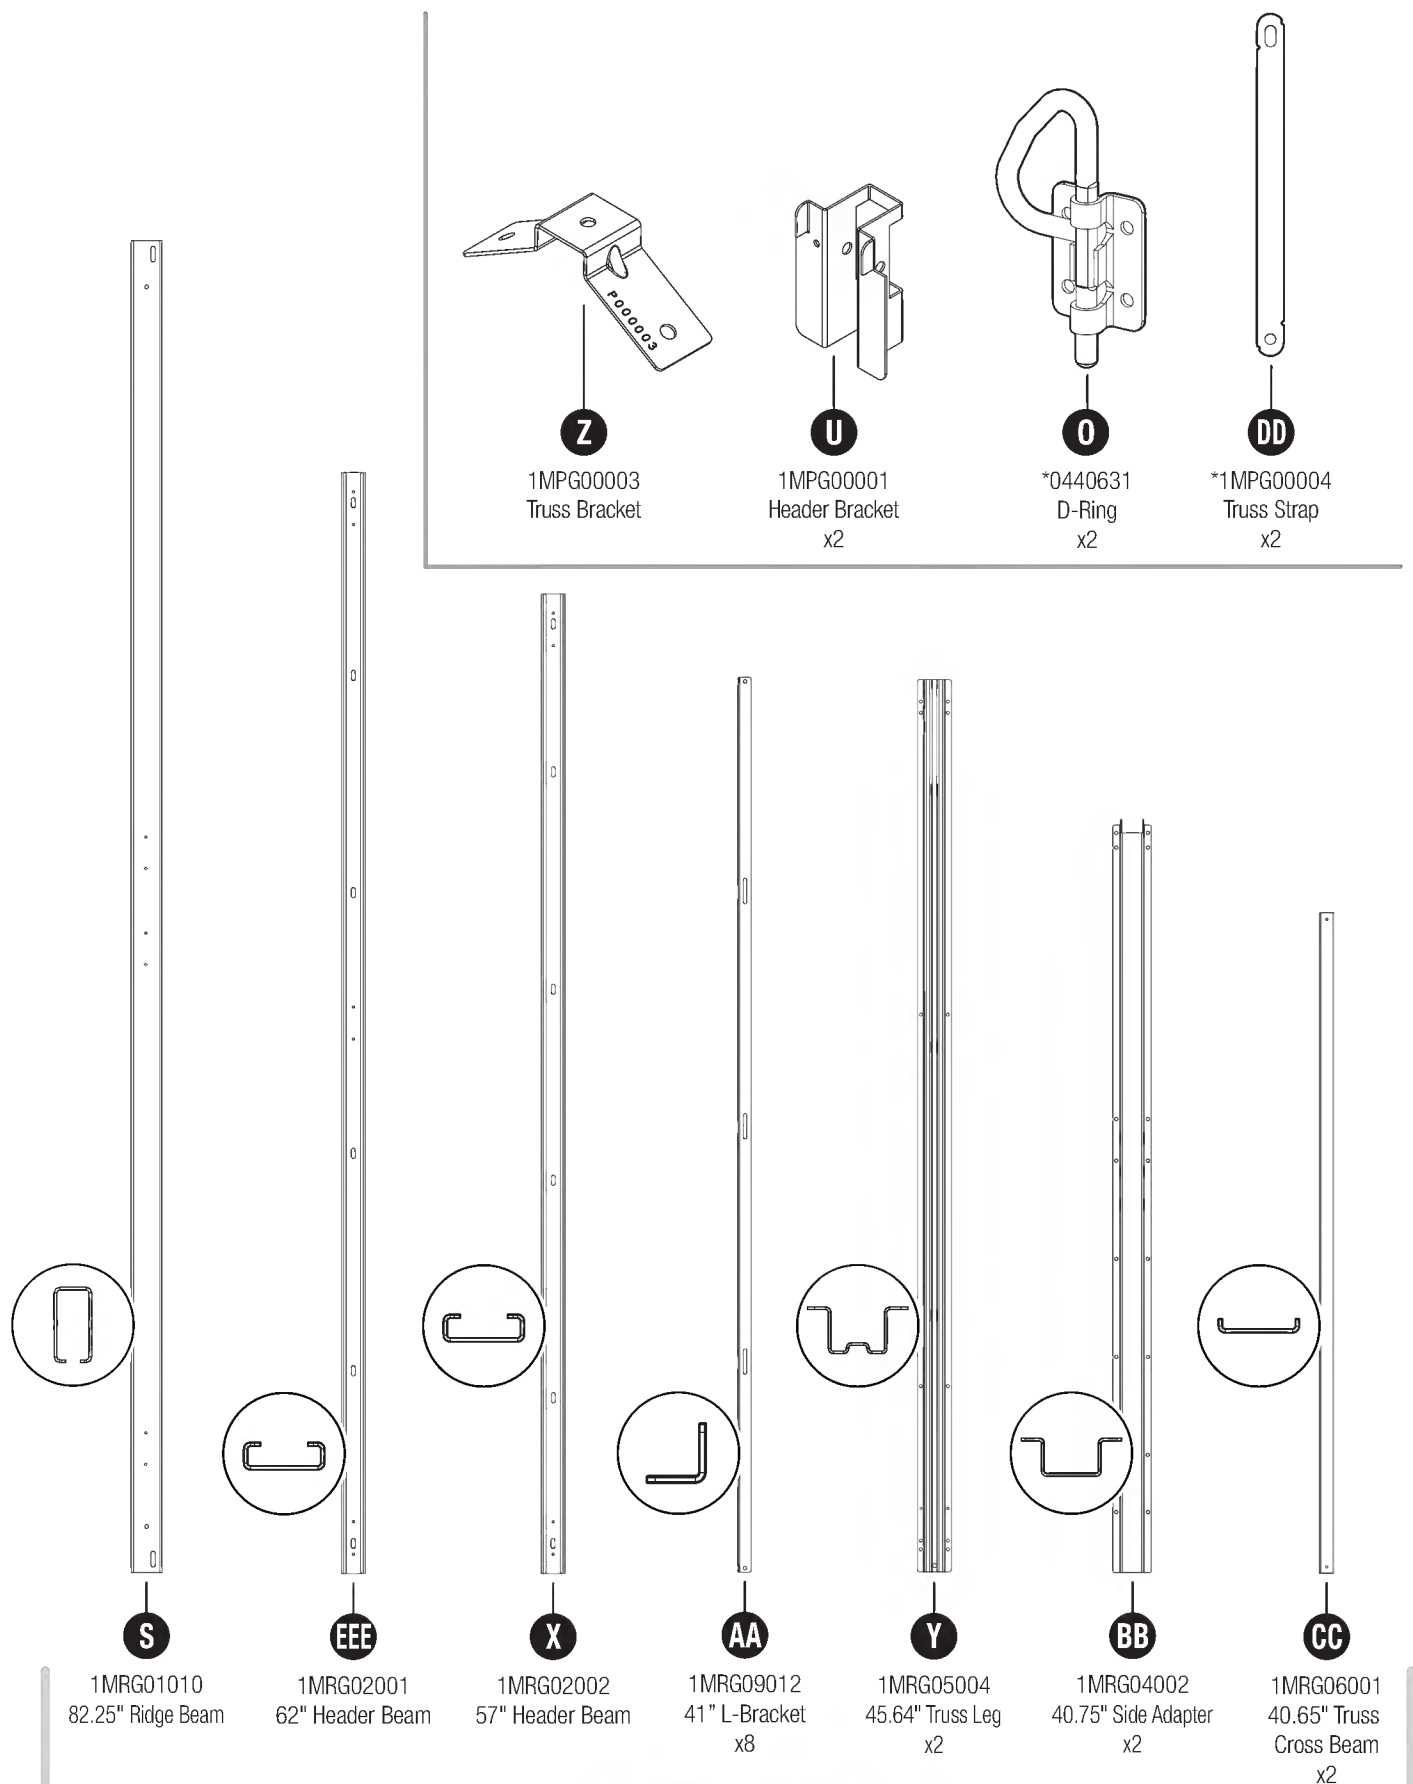


Kit #0860021G

Parts - Hardware

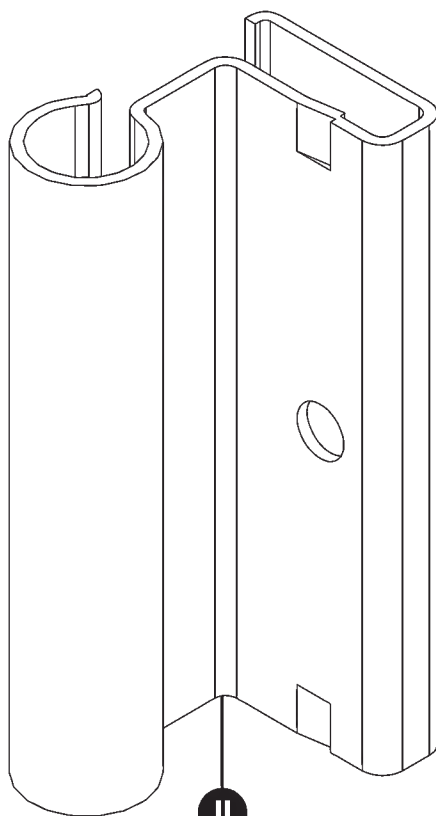


OMP000002 – Metal Hinge Plate
x6


0480340 – Hardware Bag

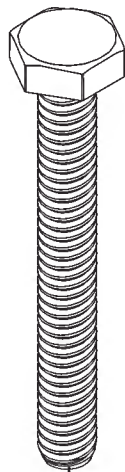

.25 x 2" Hex Bolt
x4

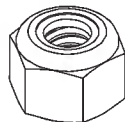

.25" Locking Nut
x6

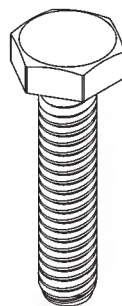


.25 - 20 x 1" Hex Bolt
x2

0480375 (x2) – Hardware Bag




.625" Screw
x105 (per bag)

0480374 – Hardware Bag

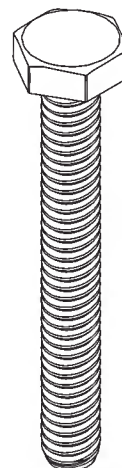


.25 x 2" Hex Bolt
x2

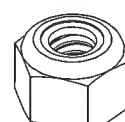


.25" Locking Nut
x2

0480337 – Hardware Bag

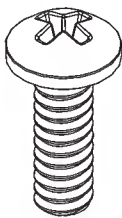

.25 x .75" Screw
x6

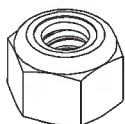


.25" Locking Nut
x6

0480452 – Hardware Bag




#8 x .625" Screw
x9

Hardware Bag

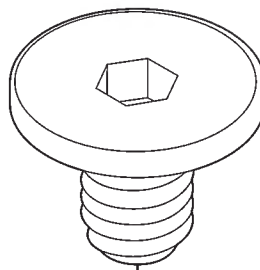


Easy Bolt
x31

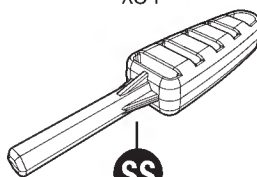


*Easy Driver

0480438 – Hardware Bag

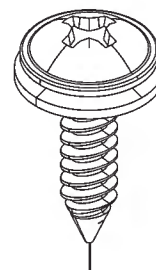



#10 x .75" Screw
x22




#10 Rubber Sealing Washer
x22

Hardware shown at actual size (*unless otherwise noted). Extra hardware provided. Not all are used.

Parts - Door Handle Kit 0463282

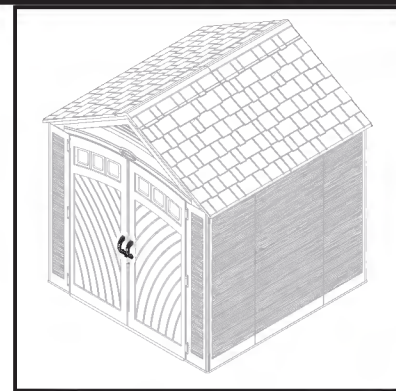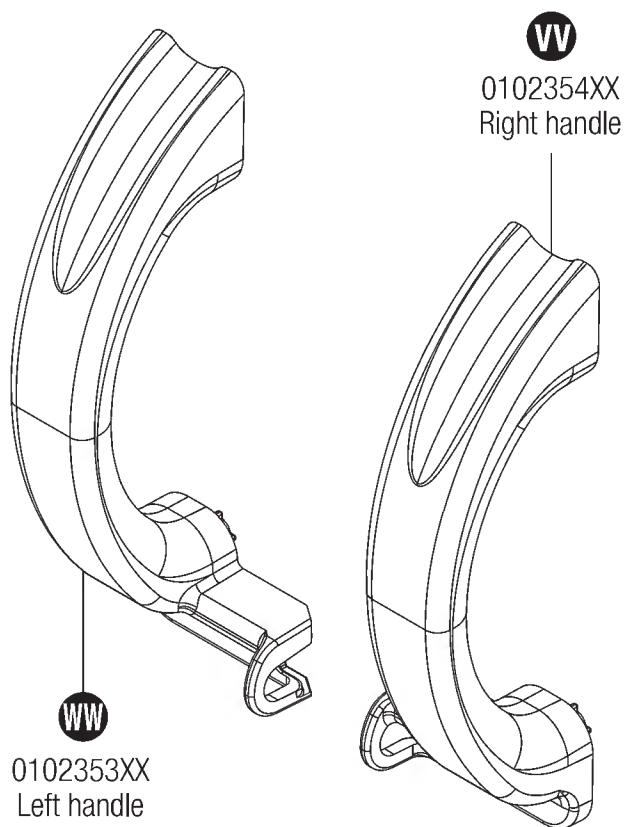

0480370 – Hardware Bag

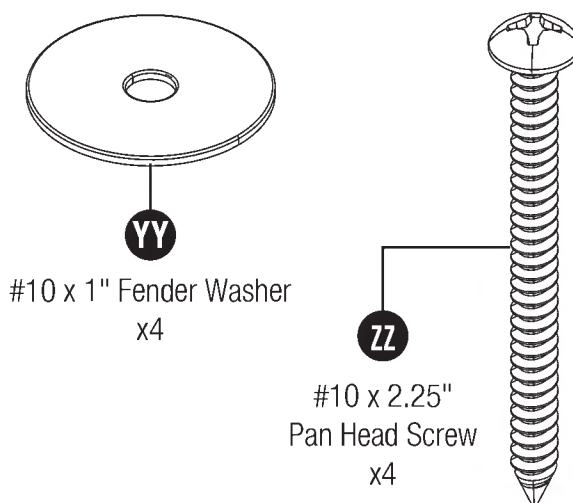

Hardware shown at actual size (*unless otherwise noted). Extra hardware provided. Not all are used.

Site Preparation and Platform Construction

Materials **NOT** supplied with Shed Kit

Important:


- **Site preparation is required for this shed. Placing the shed on a properly constructed, square, flat, smooth and level foundation, as described below, is required. Without a properly constructed foundation, settling will eventually occur, causing distortion and damage to the shed. Suncast is not responsible for replacing parts damaged or property lost due to incorrect foundation construction or improper assembly. Warranty requires a properly constructed foundation to which the shed must be anchored as instructed below.**
- **Complete the site preparation and foundation construction before unpacking parts and beginning assembly. For tips on site preparation, go to www.suncast.com, consult retailer, or local code.**

Site Preparation

1. Consult your local authorities for building codes and covenants before beginning foundation or erecting shed.
2. Before any digging, check with local utilities to determine location of buried cables, pipes, etc.
3. Decide which type of foundation is most suitable for your installation. The foundation surface must be square, flat, smooth and level. Follow the below guidelines for foundation options.
4. Complete the foundation preparations as follows:
 - A vapor barrier may be applied over the foundation to prevent excessive condensation in the shed. Follow local building codes for a proper vapor barrier.
 - The ground should slope away from the foundation area to provide drainage.
 - Placing the shed on surfaces made of materials such as patio blocks or pavers is not acceptable for long-term support structure or smooth surface. Use of these will void the warranty.

Concrete Slab



- Construct a slab of at least 4" thickness.
- The use of reinforcement bar is recommended.
- For foundations larger than specified below, the shed must rest on a continuous, level portion of the concrete slab

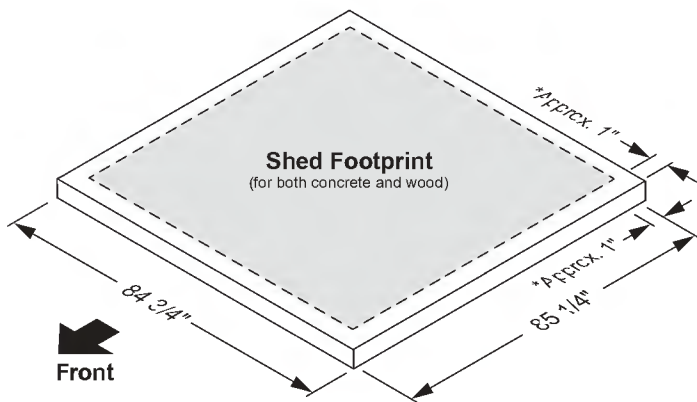

* Dimensions shown are minimal for proper fit of the shed.


Wood Platform

- Use exterior grade wood.
- Set the wood platform on deck footing blocks or full footing.

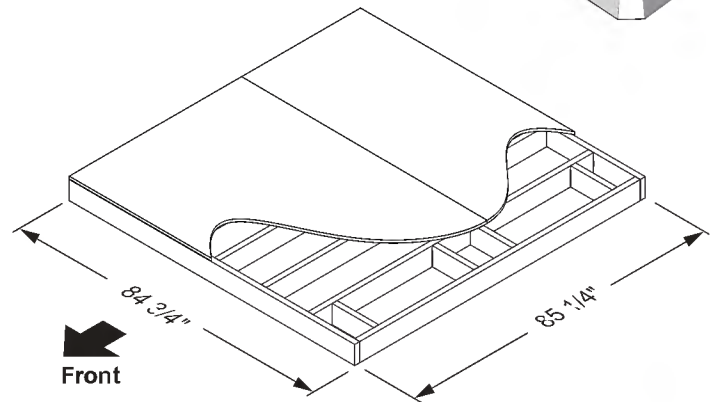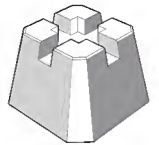

Anchoring the Floor Panels to the Foundation is required after shed assembly is complete.

- Shed floor panels include flattened areas where anchors or lag screws are to be secured. These flat areas must be drilled through prior to securing the floor panels to the foundation.

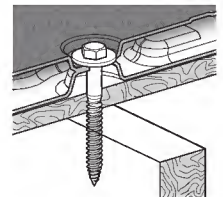

Anchor section example

- The shed must be secured to a continuous concrete slab using 3/8" masonry anchors with 1" washers (hardware not included). **8 masonry anchors are required for the Suncast BMS7705 Shed.**
- The shed must be secured to a wood platform using 1/4"-3/8" x 3" lag screws with 1" washers (hardware not included). **8 lag screws are required for the Suncast BMS7705 Shed.**


Note: Shed floor fastening locations are designed to align with the under-structure layout. Be sure the front of the floor panels are oriented correctly on the platform to ensure lag bolts engage with the under-structure.

Site Preparation and Platform Construction (continued)

Materials **NOT** supplied with Shed Kit

Wood platform critical spacing


- Check all critical spacing measurements carefully.

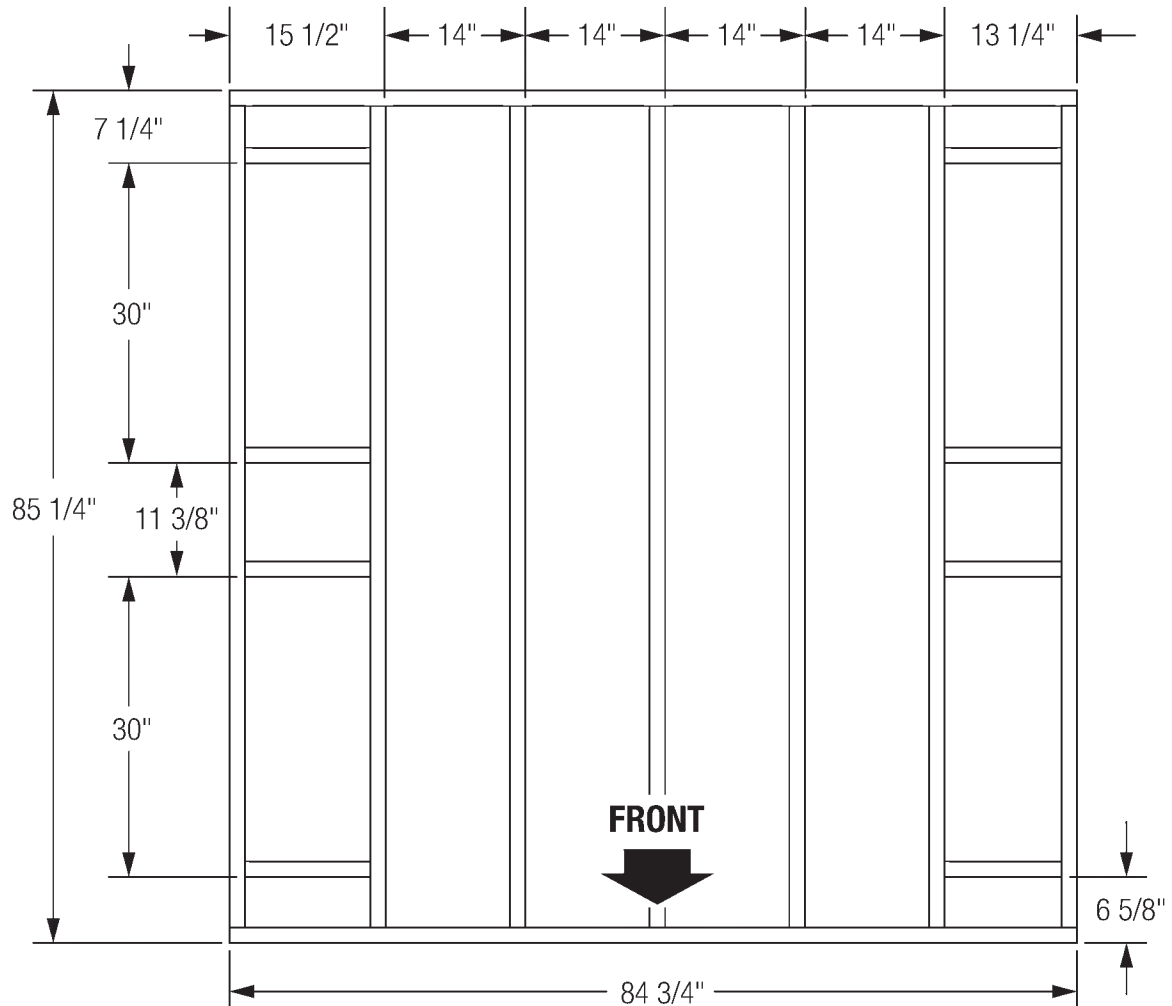

Wood platform materials list


Item	Qty	Size
A	1	37 1/4" x 84 3/4" x 3/4"
B	1	48" x 84 3/4" x 3/4"
C	2	2" x 6" x 84 3/4"
D	4	2" x 6" x 12 1/2"
E	7	2" x 6" x 82 1/4"
F	4	2" x 6" x 11 3/4"

- Please note, 2 x 6 dimensional lumber is actually 1/2" smaller than noted sizes. Dimensions given presume standard 1.5" x 5.5" actual size lumber. Lumber dimensions can vary. Check lumber dimensions before cutting and make appropriate adjustments to achieve given dimensions. Cut sizes are actual size.

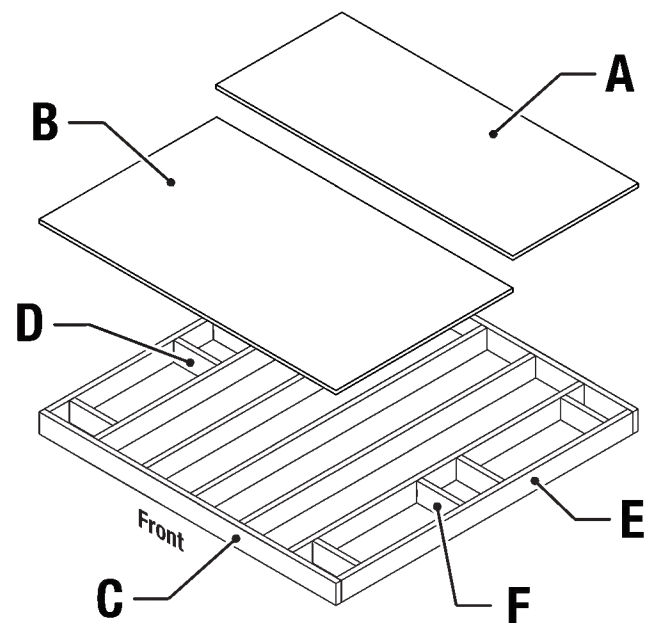


Pre-Assembly - Doors

Power tools can apply excessive torque resulting in damage to the product. If you choose to use a power drill to assemble the product, Suncast recommends using a variable speed, cordless drill with a variable clutch set at the lowest setting. A #2 Phillips driver bit is compatible with the hardware provided. Suncast makes no guarantee that following this recommendation will prevent damage to the product. Damage to parts due to over-torque are not covered under Suncast's limited-warranty.

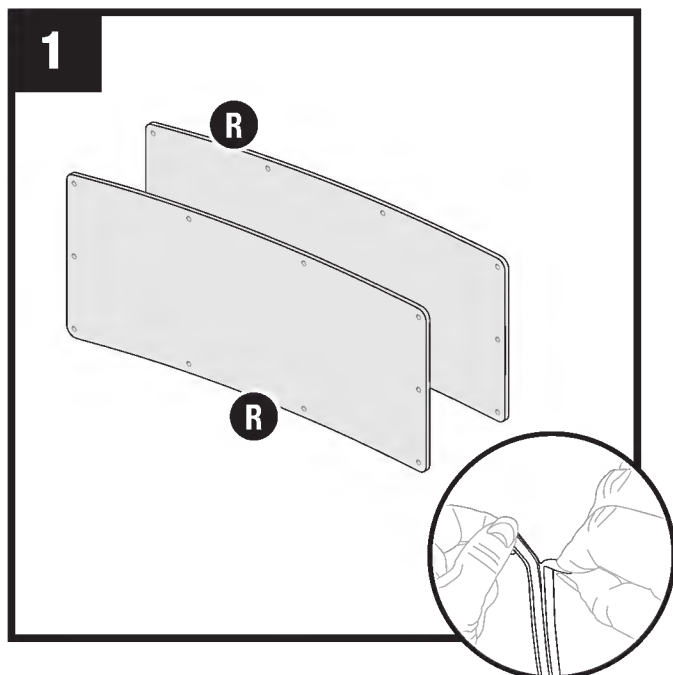


Remove protective wrapping and separate door windows (**R**). Separate the 2 window gaskets (**P**) and peel off backing.

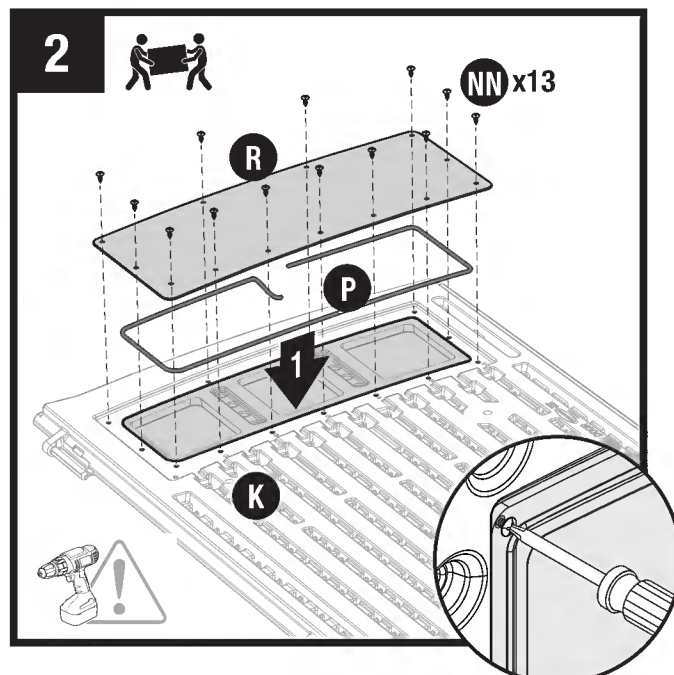


Place right door (**K**) on flat surface, facing down. Starting at the top-center of the window, press one end of the gasket (**P**) into the channel and work around the window. **DO NOT STRETCH GASKET**. Trim any excess gasket with scissors.

Lay 1 door window (**R**) over the window opening. Secure window with 13 screws (**NN**).

Repeat for left door (**J**) and remaining door window (**R**).

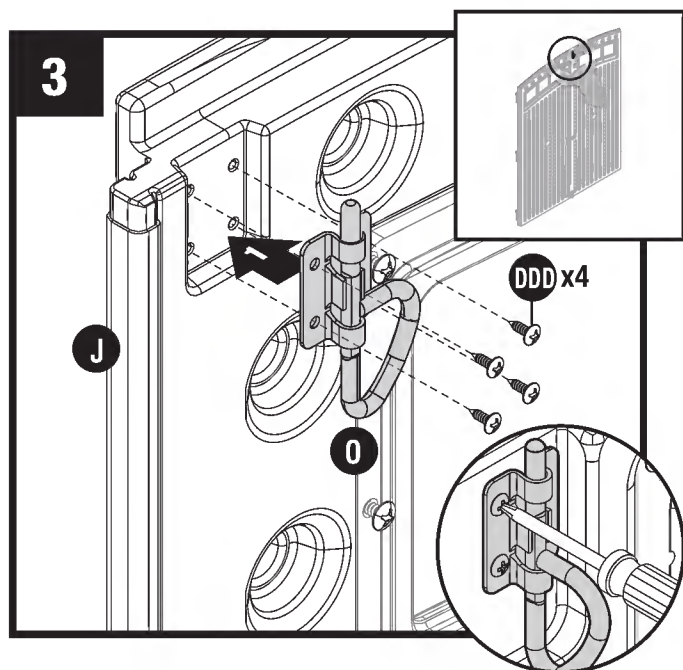


At top interior side of left door (**J**), attach D-ring slide bolt (**O**) with 4 screws (**DDD**) through provided holes.

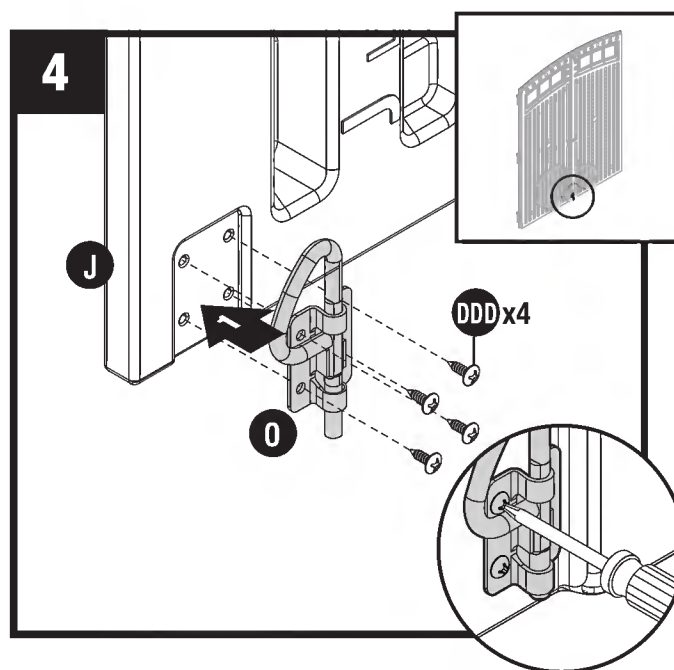


At bottom interior side of left door (**J**), attach D-ring slide bolt (**O**) with 4 screws (**DDD**) through provided holes.

Pre-Assembly - Header

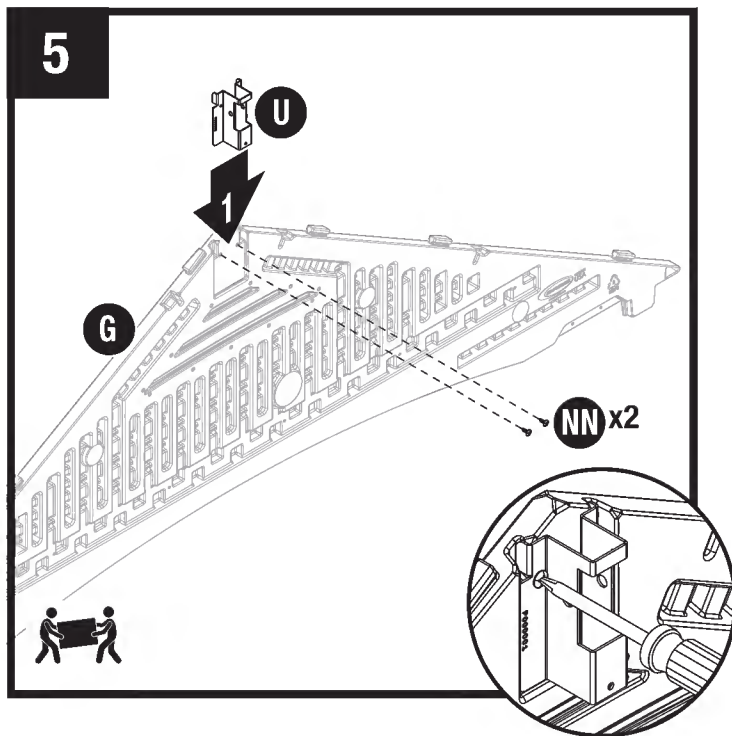


Slide header bracket (U) under tabs on inside peak of front header (G) and secure with 2 screws (NN). **DO NOT** over tighten screws.

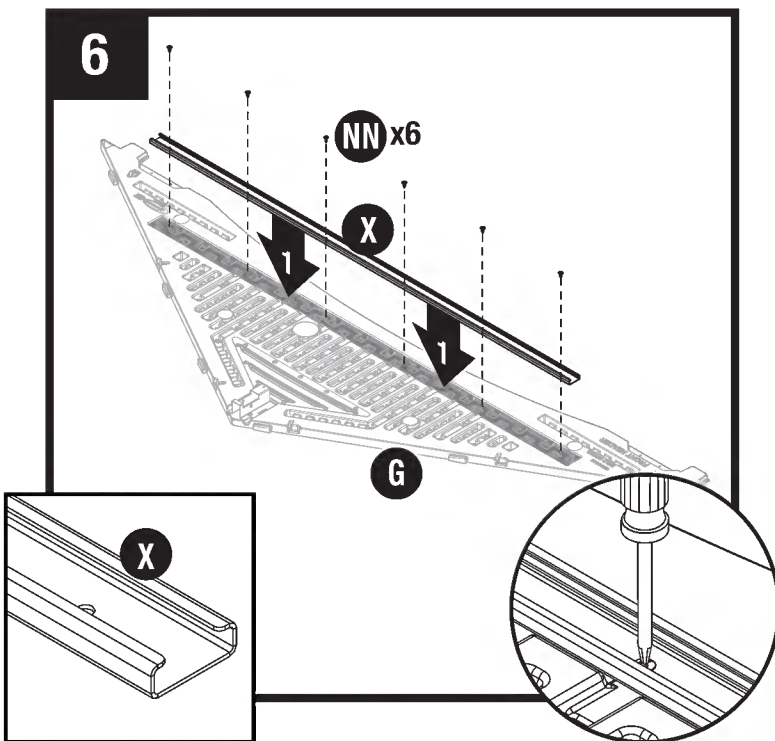

Lay front header (G) on ground with lettering side facing up. Place front header beam (X, 57") into pocket on inside of front header (G). Attach with 6 screws (NN). **DO NOT** over tighten screws.


Repeat for rear header (H) and rear header beam (EEE, 62").

Pre-Assembly - Roof and Truss

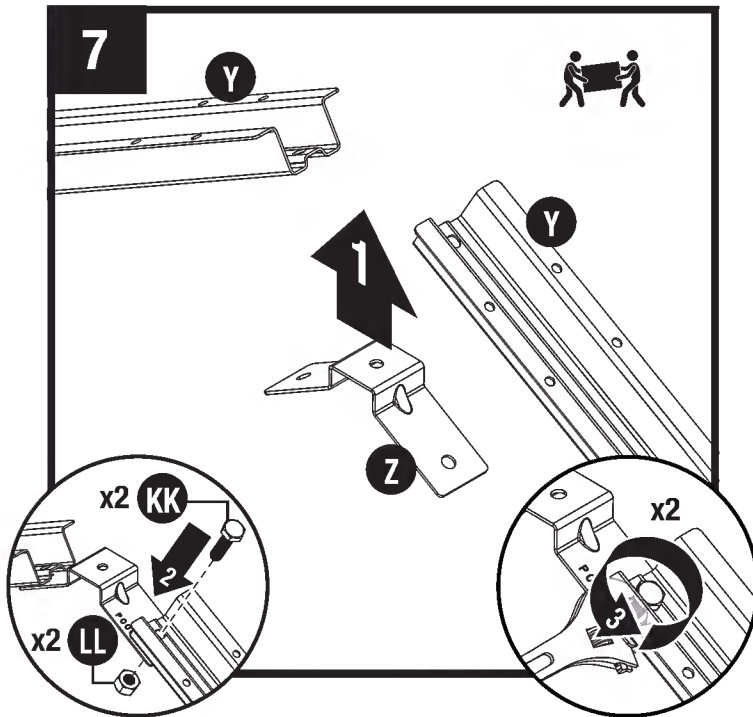


Attach truss bracket (Z) to end of 1 truss leg (Y) with 1 bolt (KK) and locking nut (LL).

Repeat for second truss leg (Y).

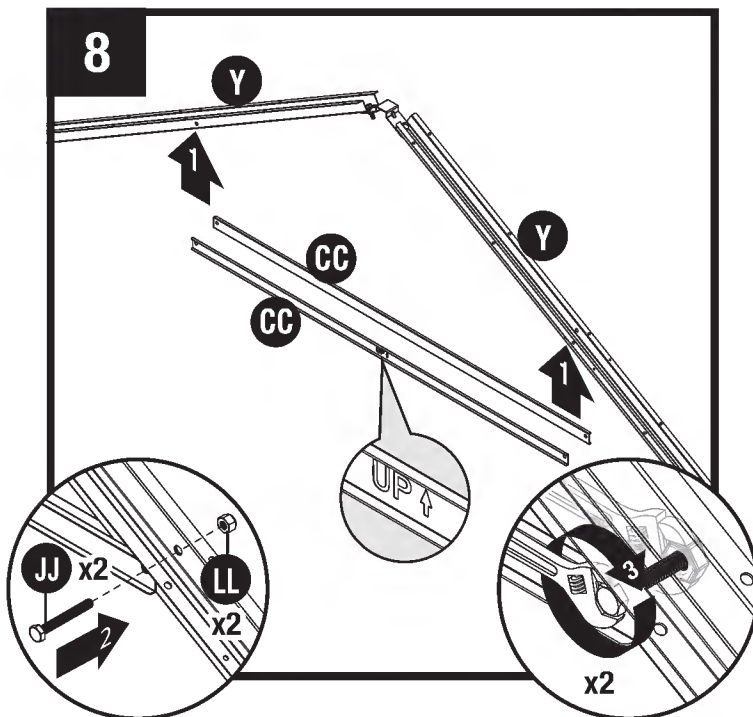


Attach 2 truss cross beams (CC) to 2 truss legs (Y) using 2 hex bolts (JJ) and locking nuts (LL). Stand truss and check cross beam is level.

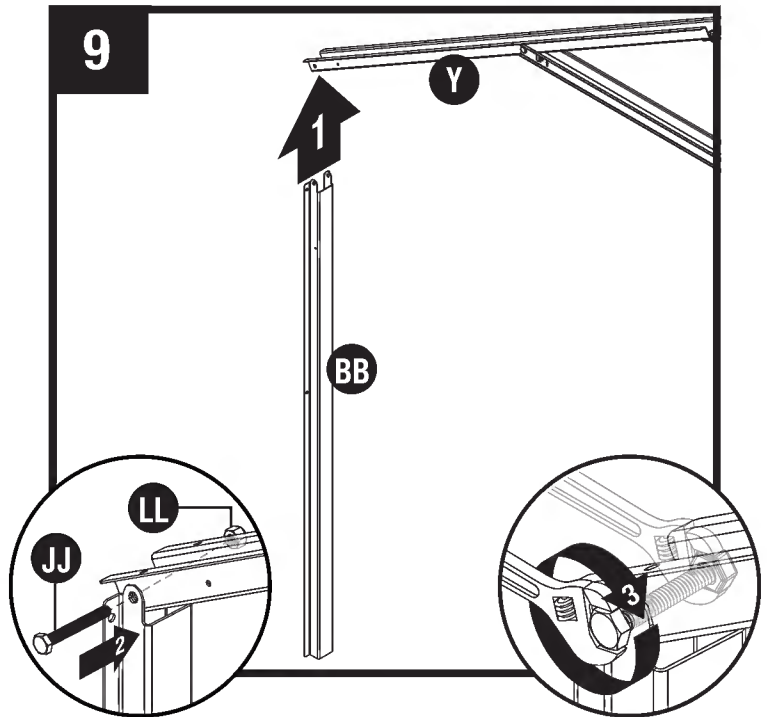


Place side adaptor (BB) at end of left truss leg (Y). Secure adaptor with 1 bolt (JJ) and nut (LL).

Repeat for other truss leg.

Assembly - Walls

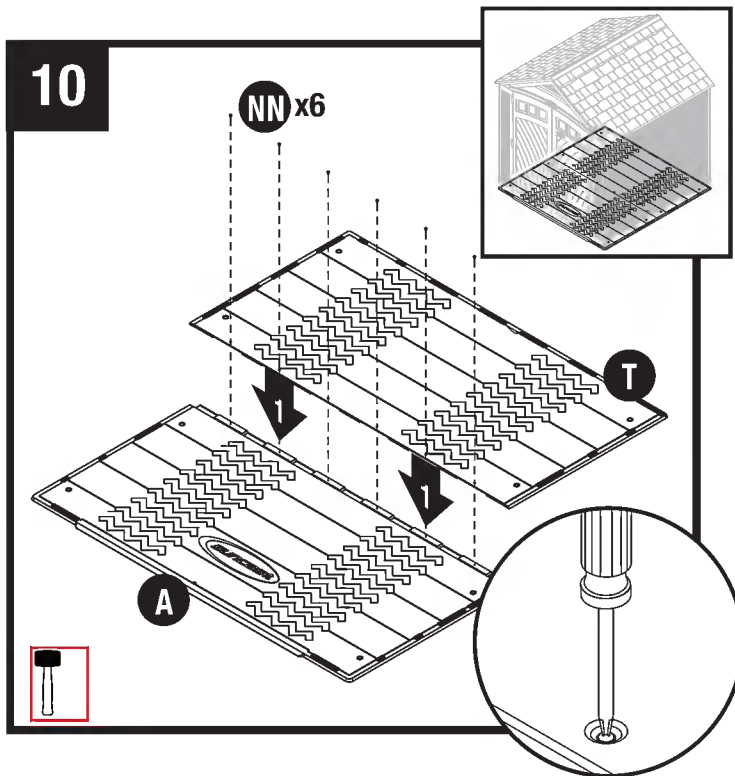


Push front floor (A) and rear floor (T) panels together and secure with 6 screws (NN).

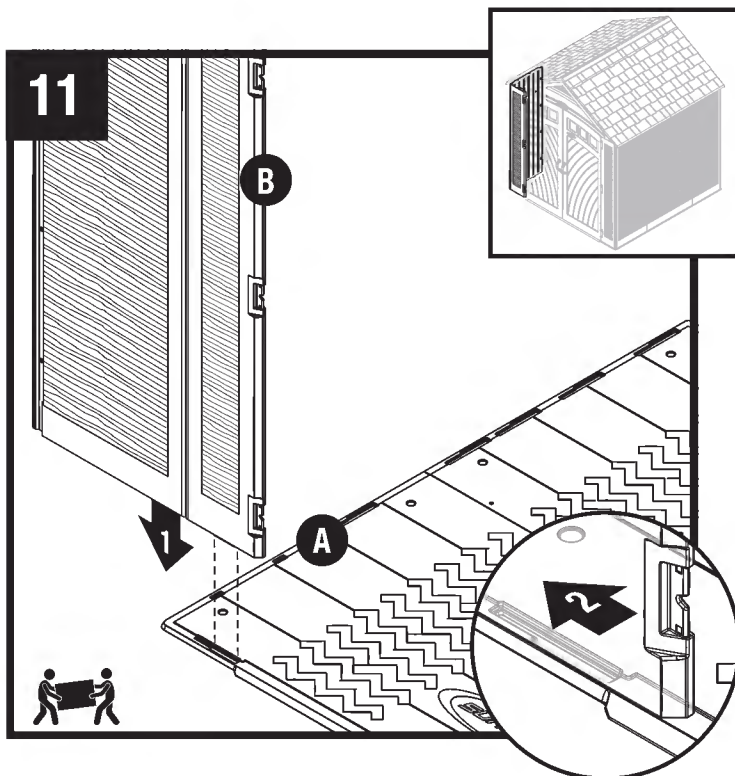


Align tab on bottom right side of left front corner (B) with slot on front floor (A). Lower panel into slot and lock in place by sliding panel toward outside of floor.

Note: Use a rubber mallet to “push” left front corner (B) into locked position.

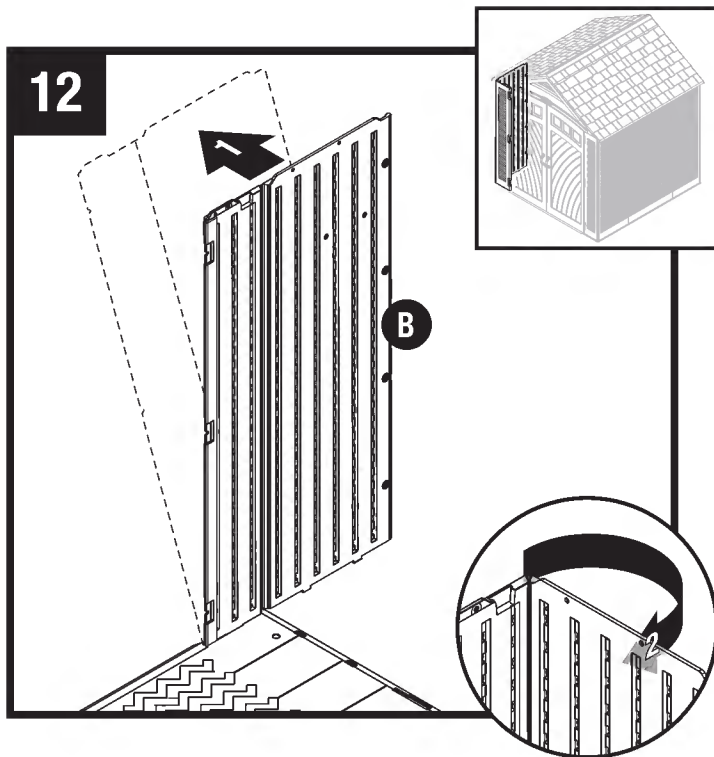



Tip left front corner **(B)** outward slightly and bend corner hinge.

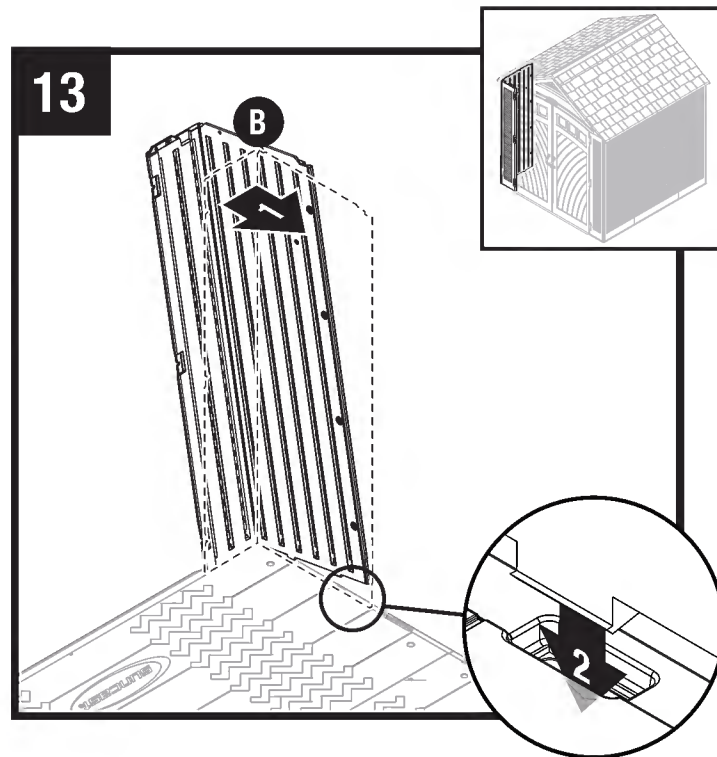

Tip left front corner **(B)** back to vertical position and align lower tabs on right side with slots in floor.


Note: You will hear a snap when tab is fully engaged.

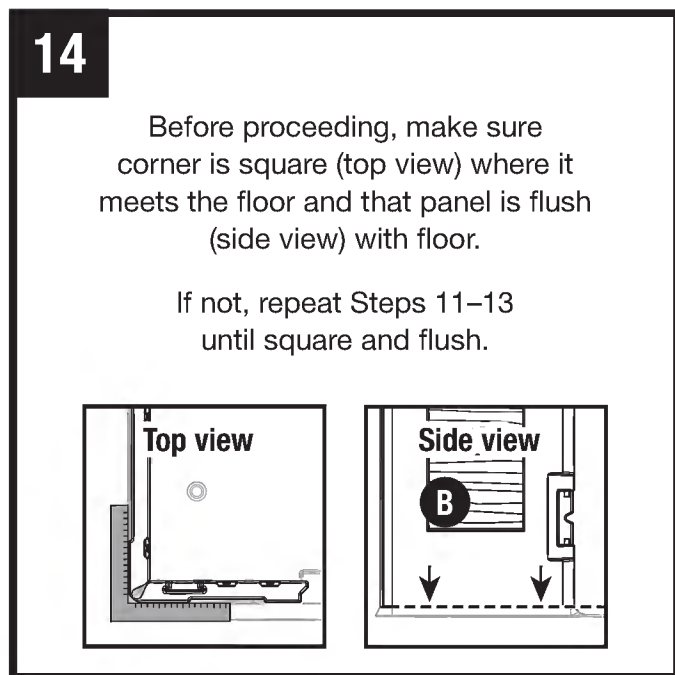

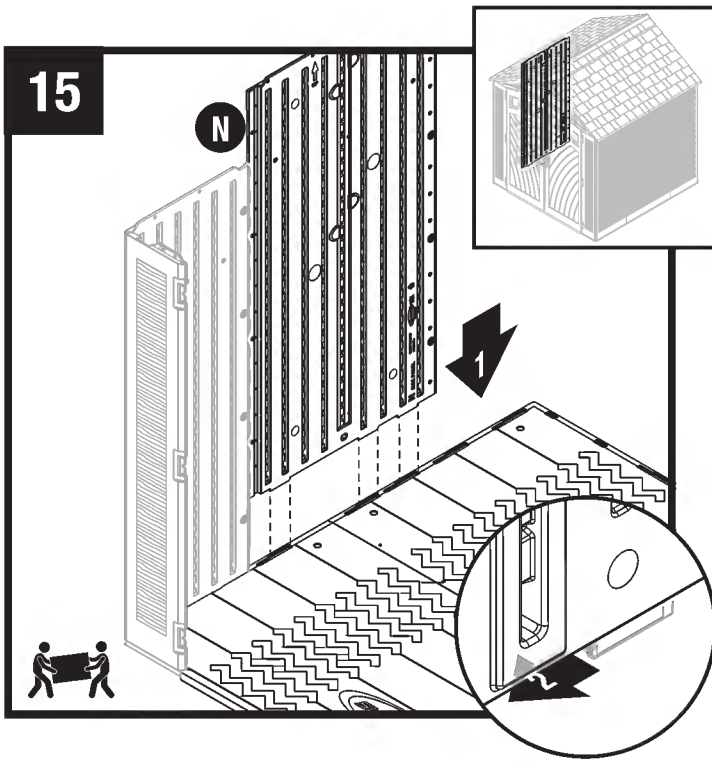


Align tabs on bottom of side panel (**N**) with slots along front and rear floors. Lower panel into slots and lock in place by sliding panel toward front corner.

Note: Use a rubber mallet to “push” side panel (**N**) into locked position.

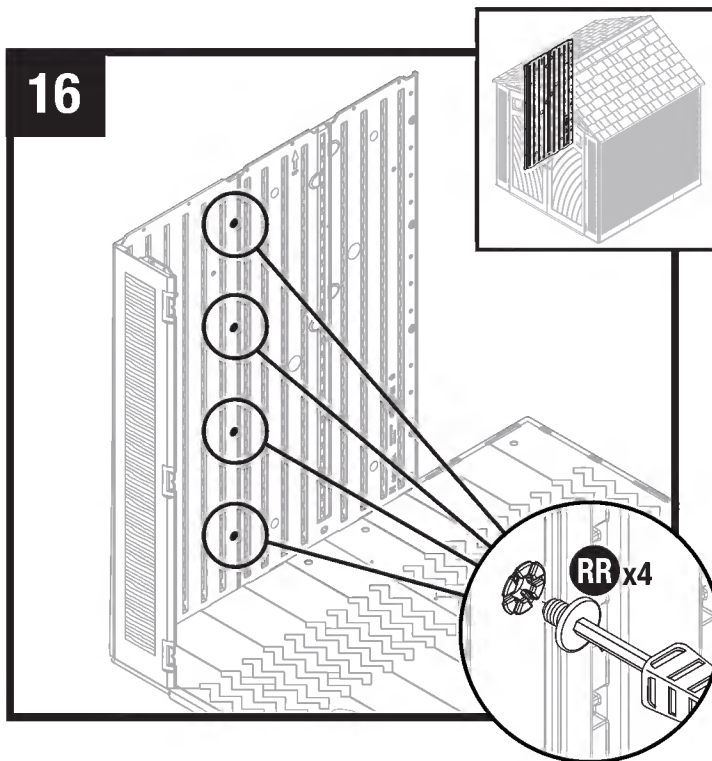


Secure side panel with 4 easy bolts (**RR**), working from floor to roof. **DO NOT** use torque wrench. Use easy bolt easy driver (**SS**) and hand tighten. Easy bolt head will be flush when fully seated. **DO NOT** over tighten easy bolts.

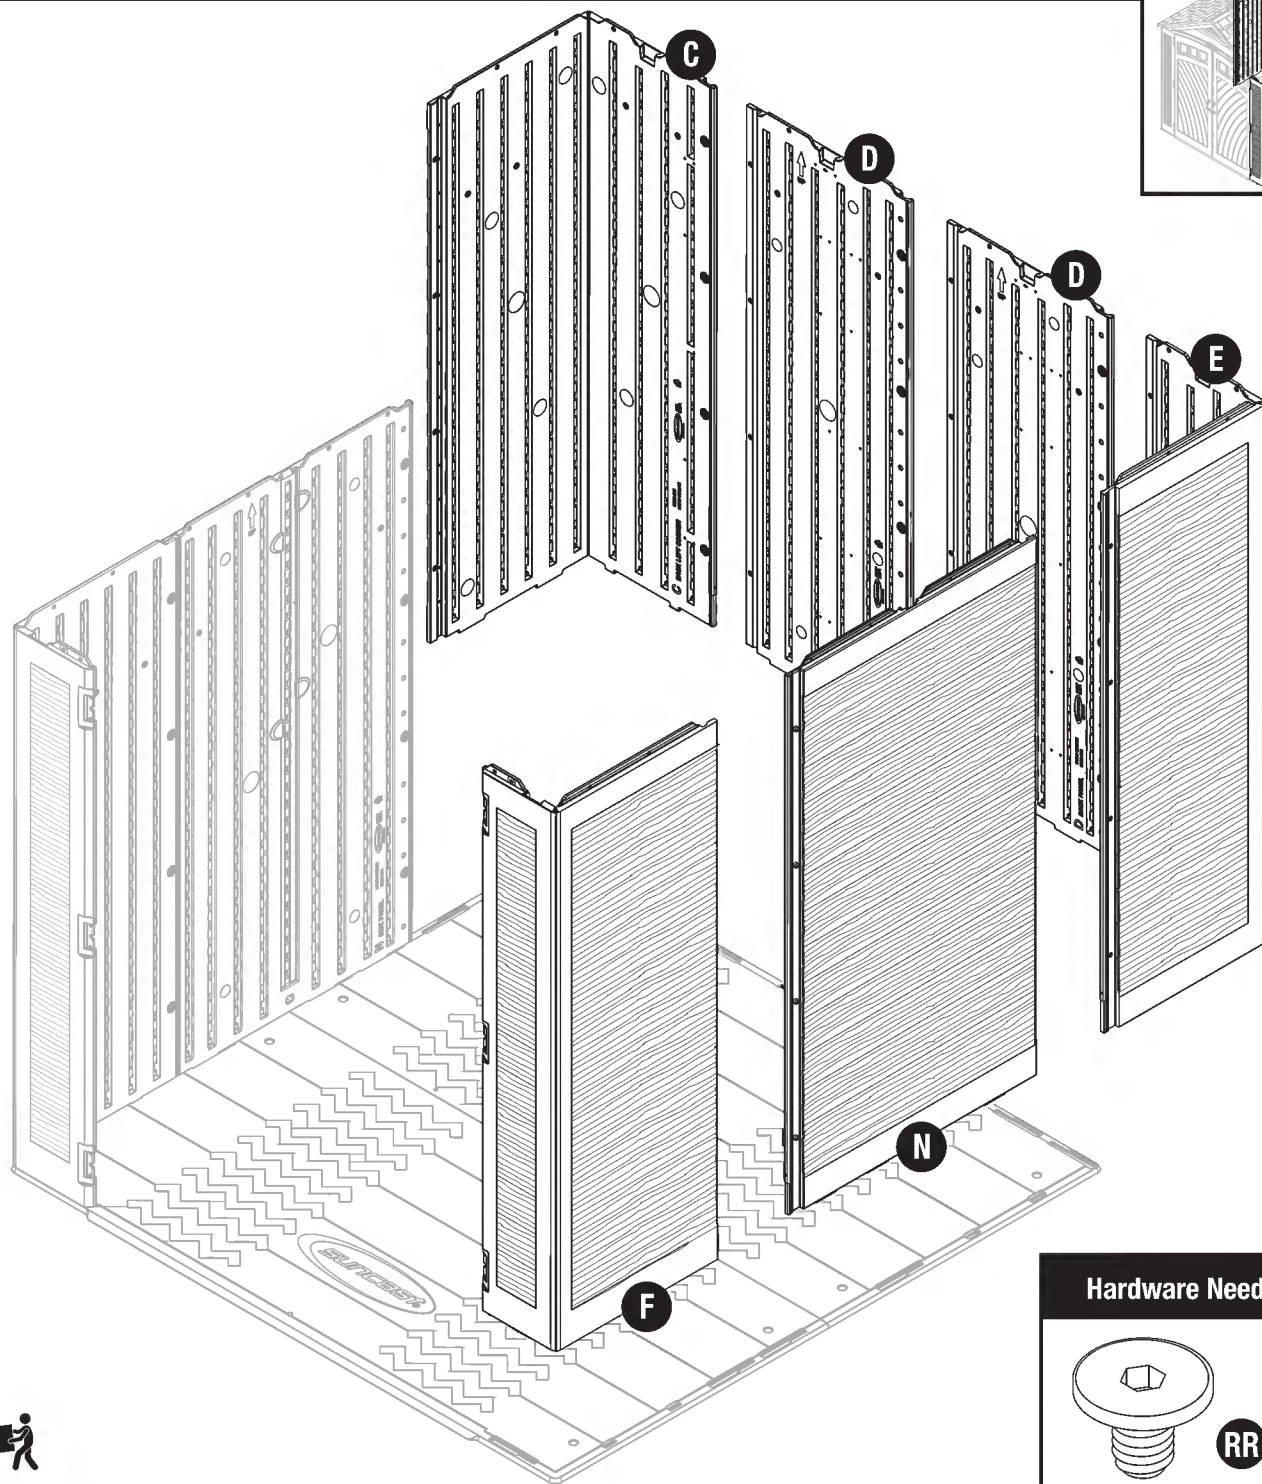

Repeat Steps 12-16 for remaining panels.


Assembly - Headers and Truss

18

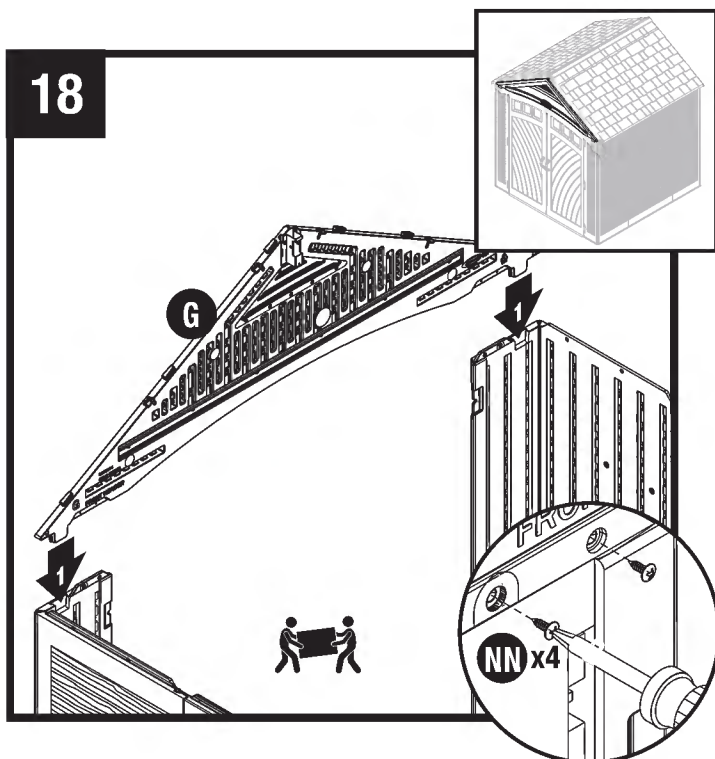


Place front header (**G**) over door opening and fit two protruding support legs into pockets molded in front corners. Secure front header using 2 screws (**NN**) in each front corner.

19

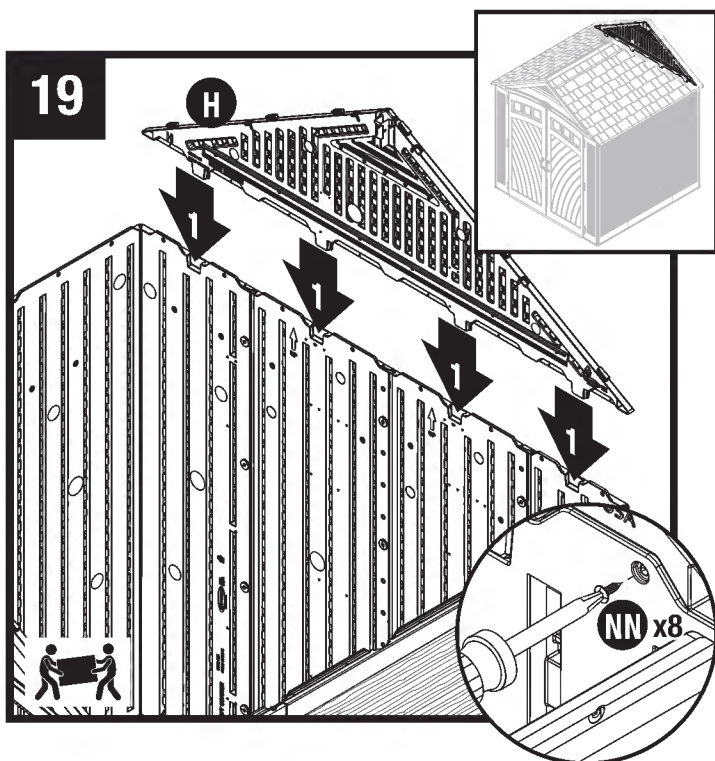


Place rear header (**H**) over back walls and fit four protruding support legs into pockets molded in back walls. Secure rear header using 8 screws (**NN**).

20

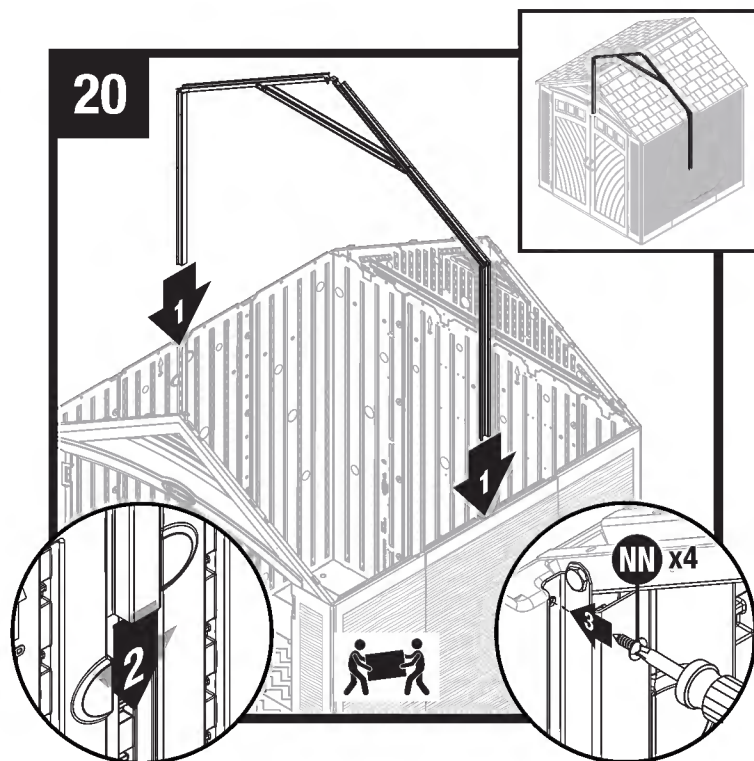

Slide truss assembly into place. Secure with 4 screws (**NN**) in each side adaptor.

21

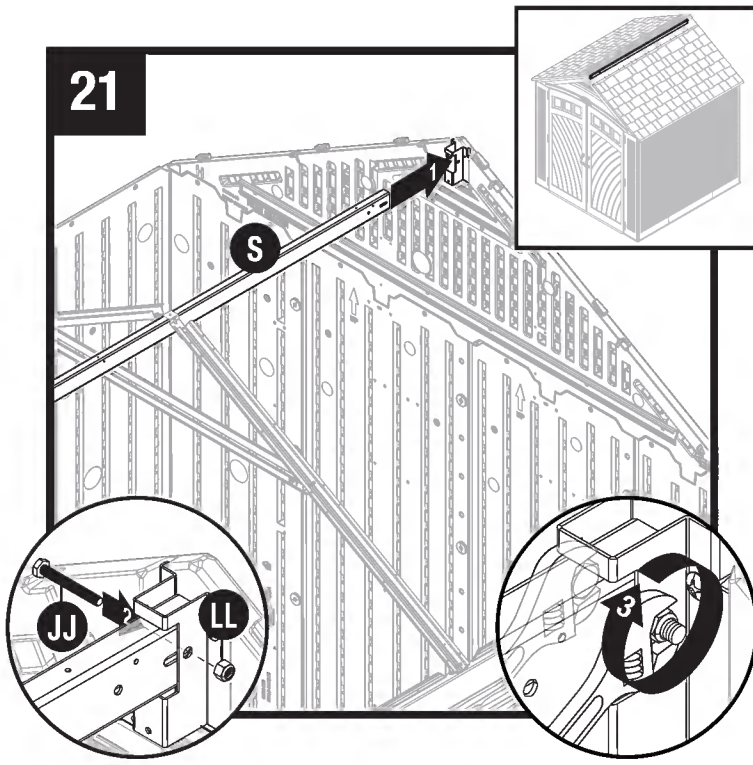


Raise ridge beam (S) up and into rear header bracket. Secure with 1 bolt (JJ) and nut (LL).

Repeat with front header bracket.

Note: Make sure open end of ridge beam faces down.

Note: Alignment of ridge beam to bracket may require header panels to be pushed inwards or outwards slightly as ridge beam is slid into place.


22

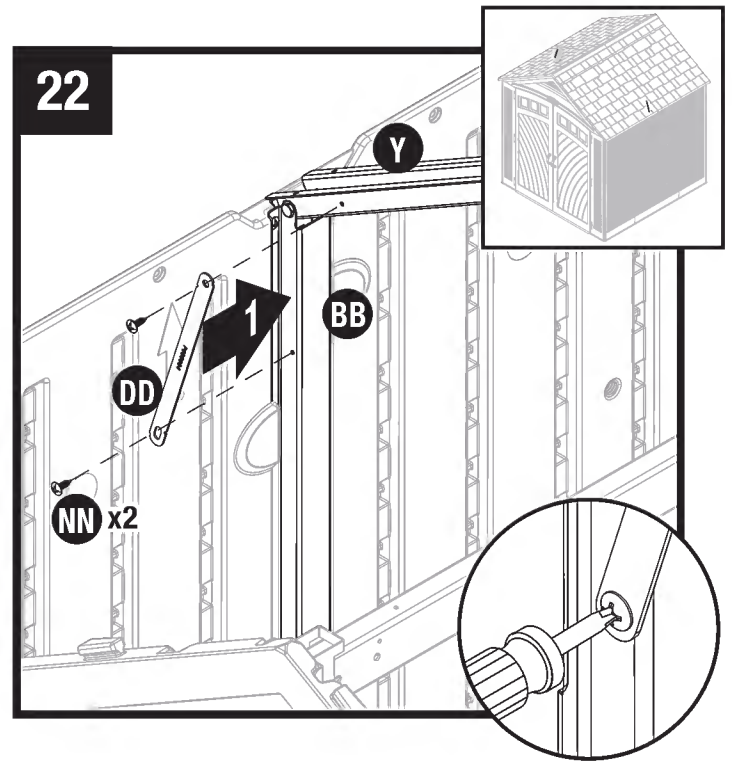

Attach truss strap (DD) to side adaptor bracket (BB) and truss leg (Y) with 2 screws (NN).


Repeat for remaining truss strap.

23

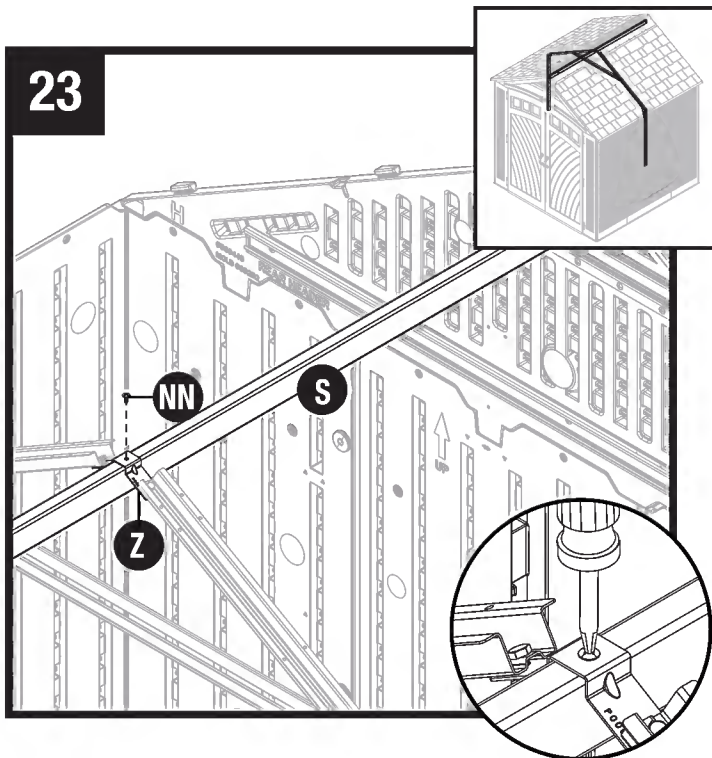

Attach truss bracket (Z) to ridge beam (S) with 1 screw (NN).

Assembly - Roof

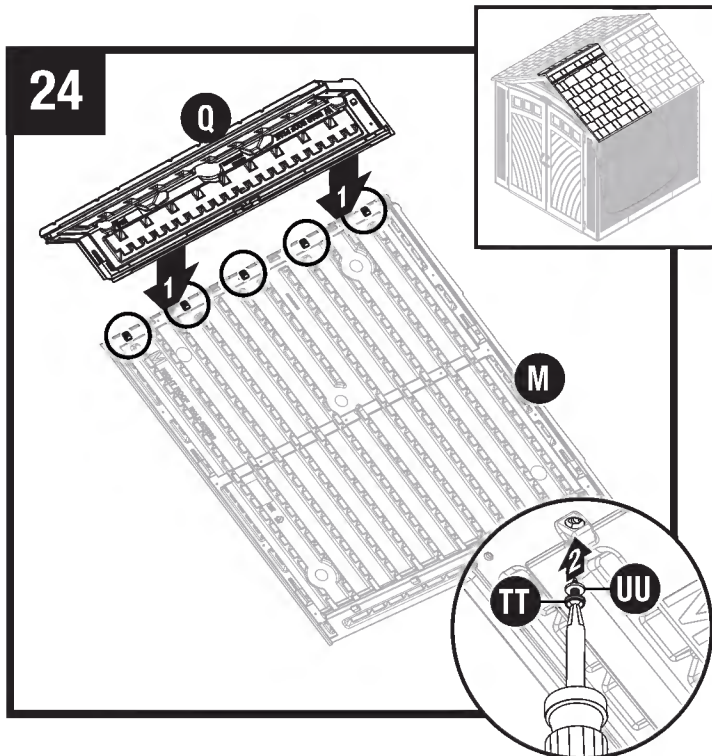


Place the front roof peak (**Q**) onto a right roof panel (**M**). Secure with 5 rubber washers (**UU**) and sealing screws (**TT**). **Repeat** for rear roof peak (**W**) and right roof panel (**M**).


Note: Rubber side of washer should be against plastic panel.




Before proceeding, locate and identify the six slots on interior side of left roof panels (**L**).

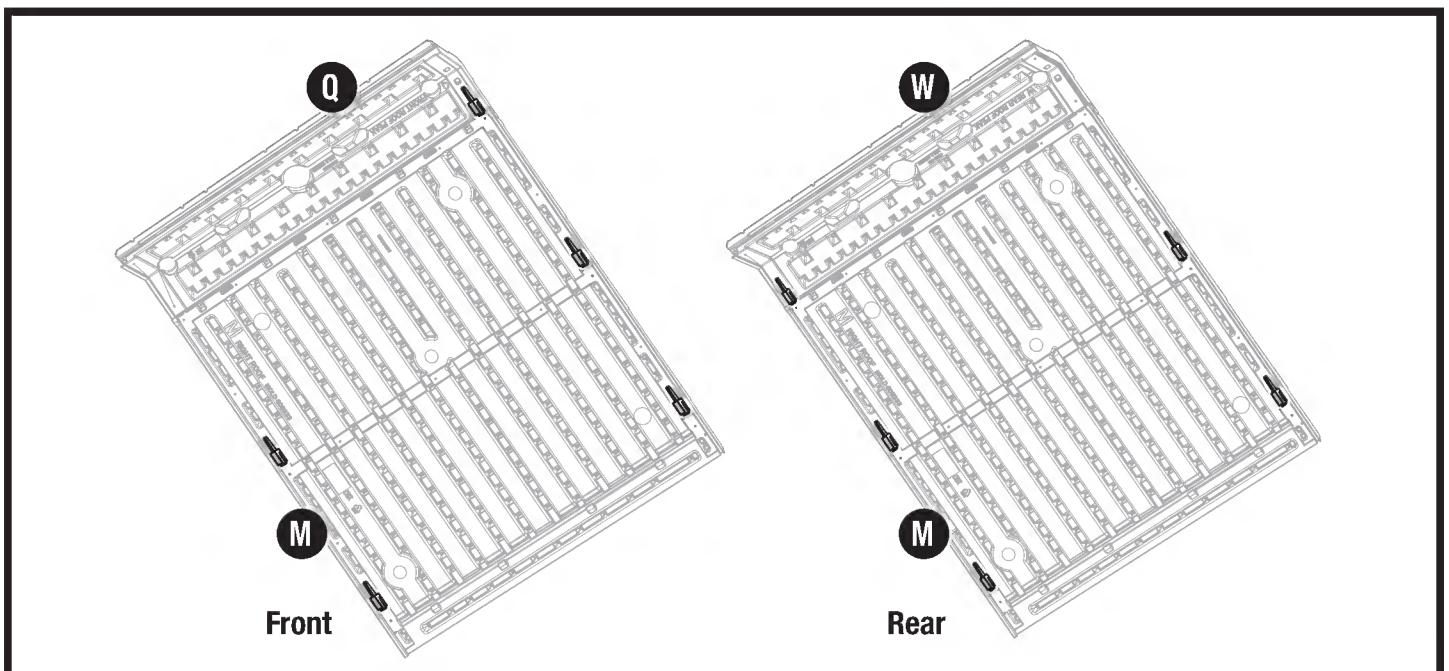


Before proceeding, locate and identify the five slots on interior side of right front (**M,Q**) and right rear (**M,W**) roof panel assemblies.

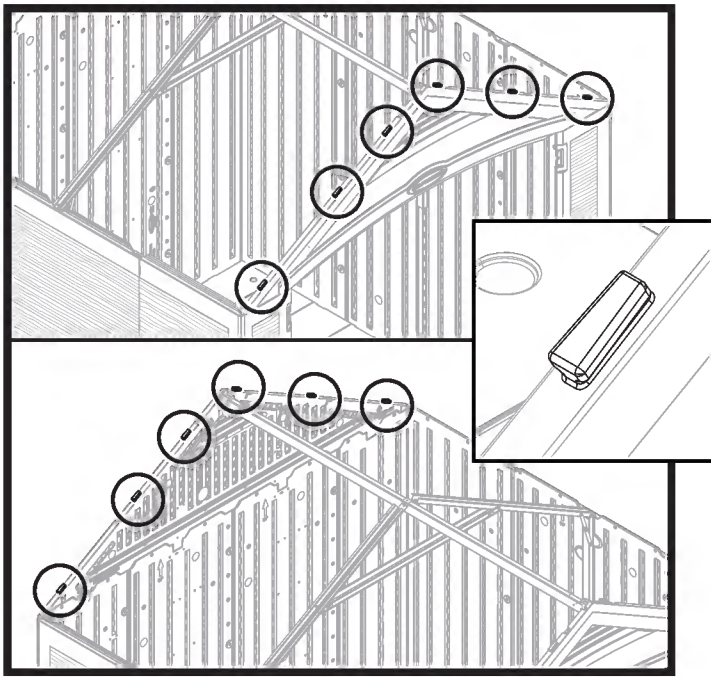


Before proceeding, locate and identify six front header tabs and six rear header tabs.

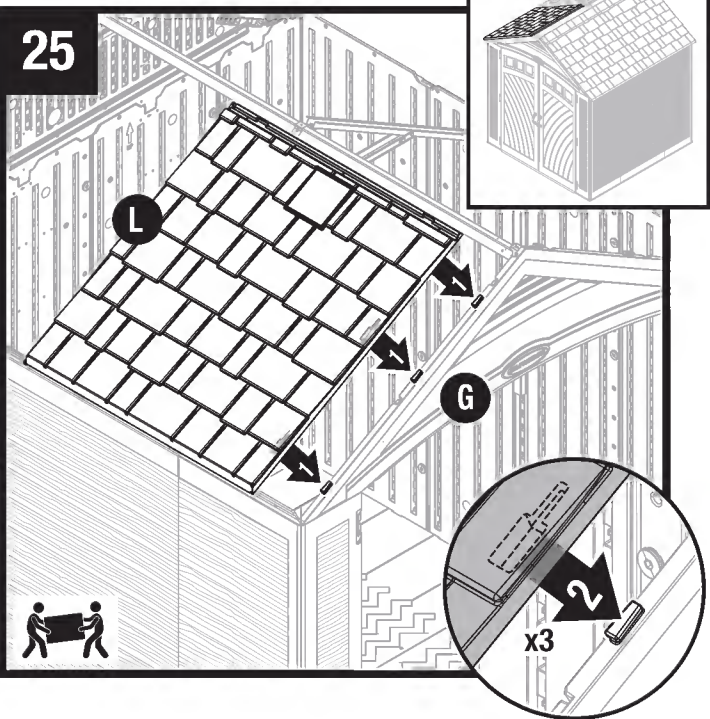


Lay left roof (L) directly over three tabs on left side of front header (G). With left roof slots seated over/on header tabs, check alignment in all three spots.

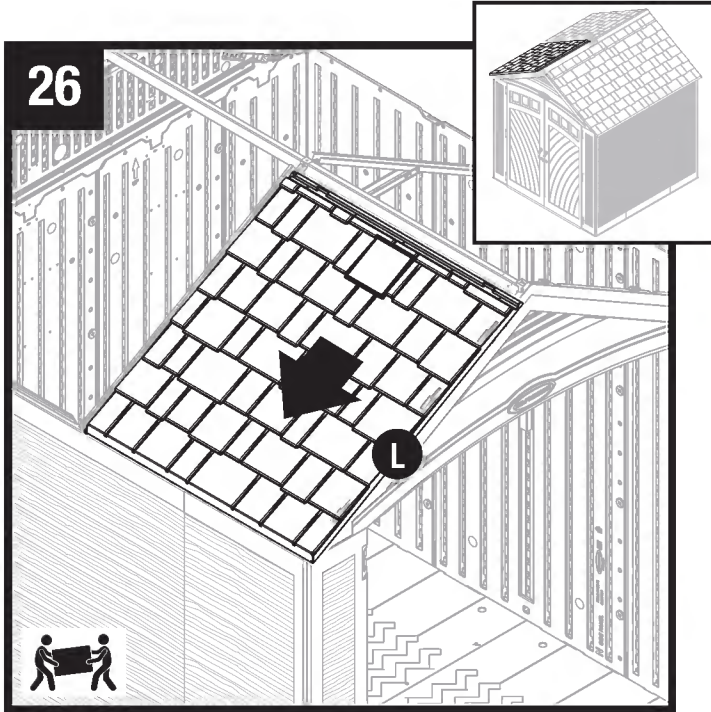


Slide left roof (L) down towards the outside of shed.

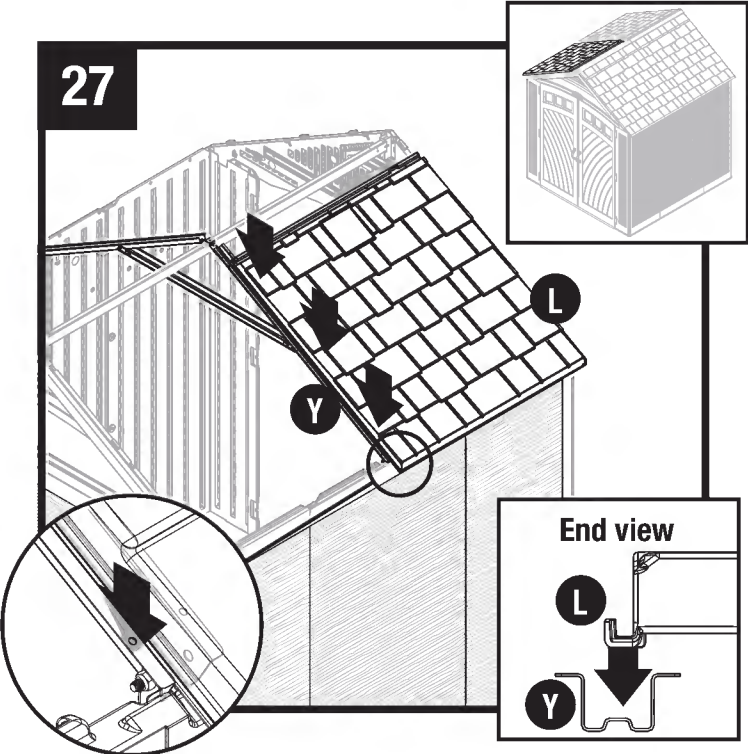


Press edge of left roof (L) into channel on truss leg (Y).

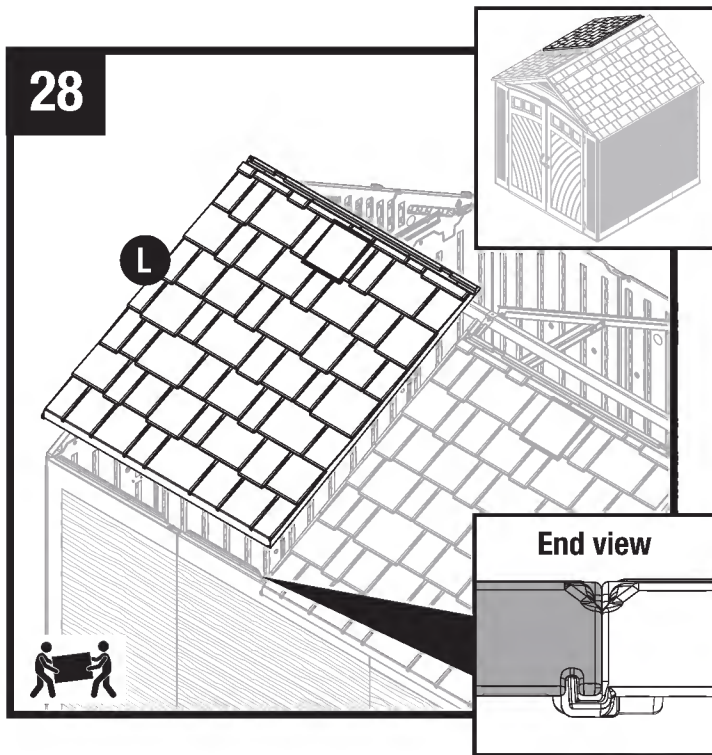


Repeat steps 25-27 for remaining left roof panel (L).

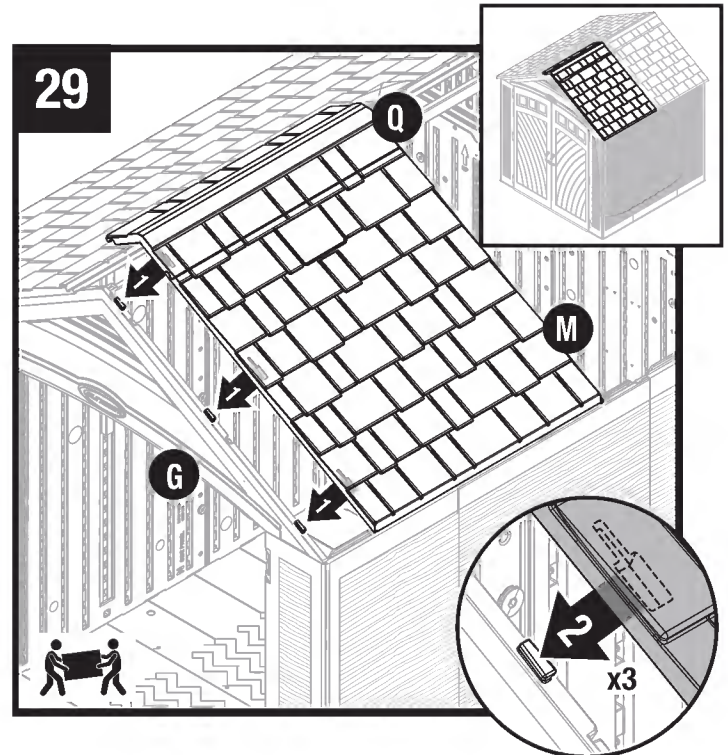


Lay right roof (M) with front roof peak (Q) directly over three tabs on right side of front header (G). With right roof slots seated over/on header tabs, check alignment in all three spots.

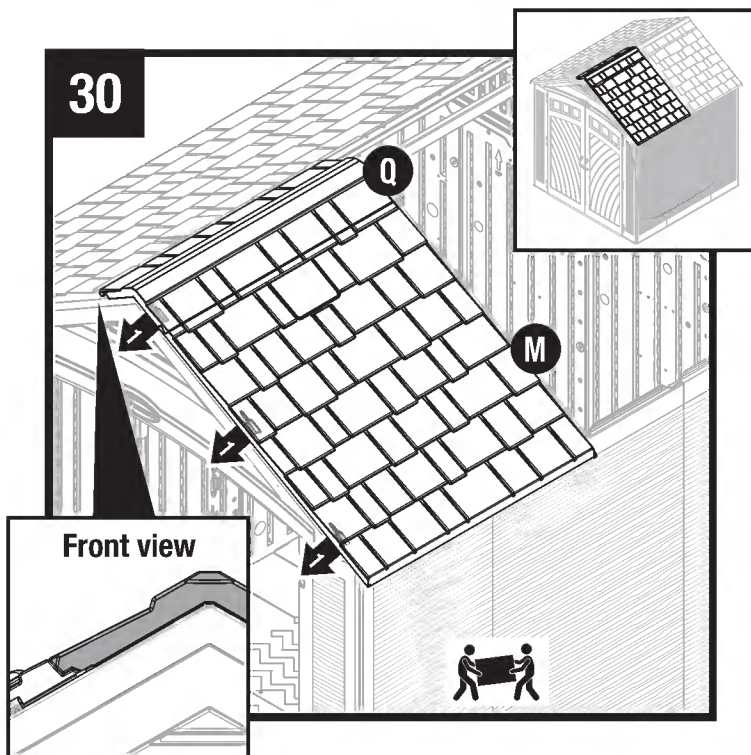


Slide right roof (M) with front roof peak (Q) down towards the outside of shed.

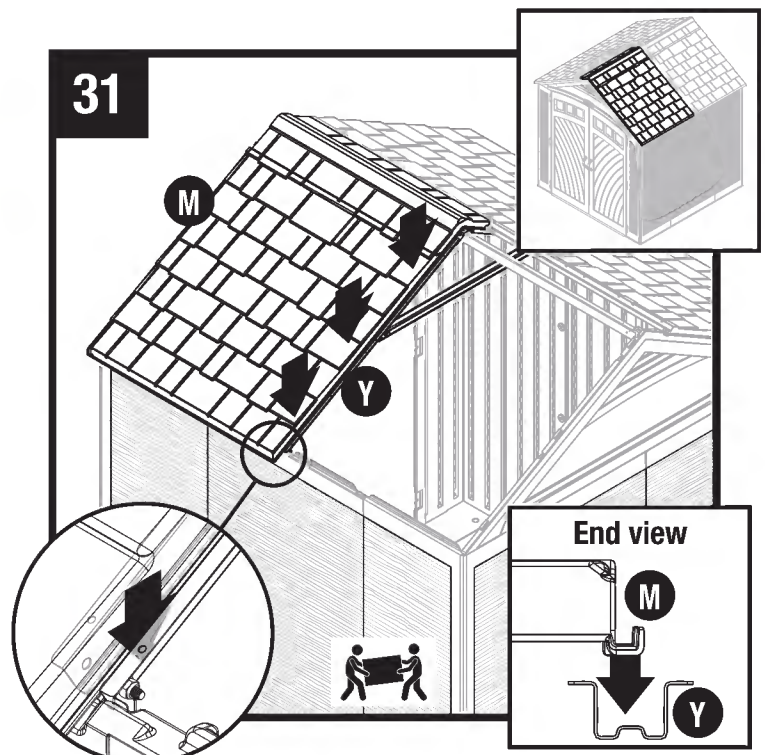

Press edge of right roof (M) into channel on truss leg (Y).

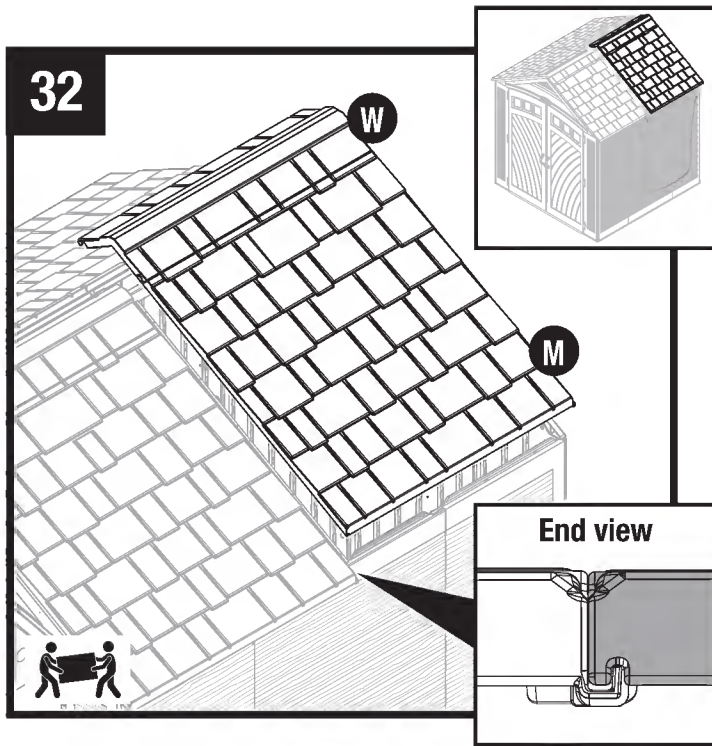


Repeat steps 29-31 for remaining right roof panel (**M**) and rear roof peak (**W**).

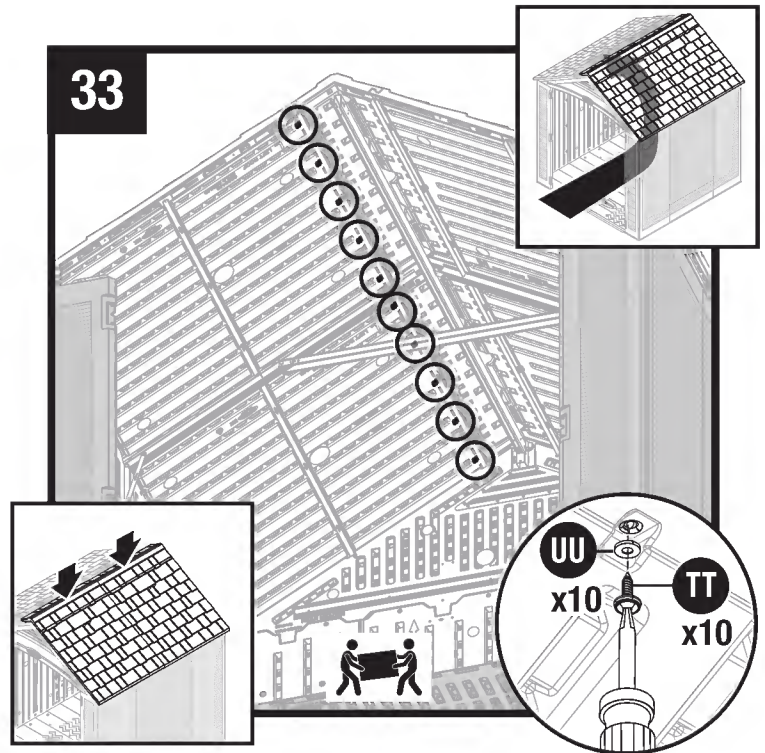


Push down the right roof panels with roof peaks from outside. From inside shed, secure roof peaks to left roof panels together using 10 rubber sealing washers (**UU**) and 10 sealing screws (**TT**).


Repeat for left roof panels.

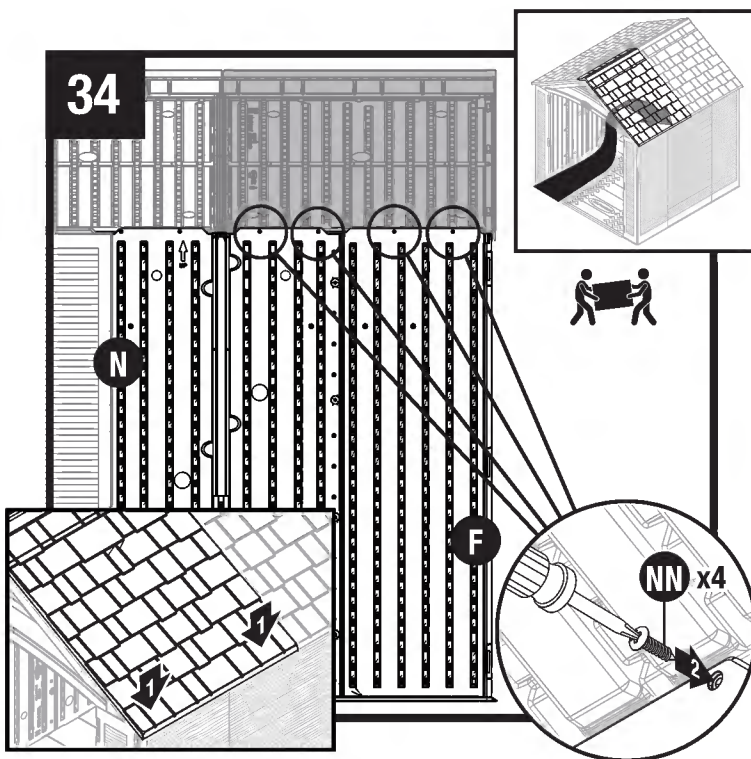


From outside of shed, pull down right front roof (**M**) to align with tabs on right front corner (**F**) and side panel (**N**). From inside of shed, secure roof to panels with 4 screws (**NN**). **Repeat** to secure the remaining three roof panels.

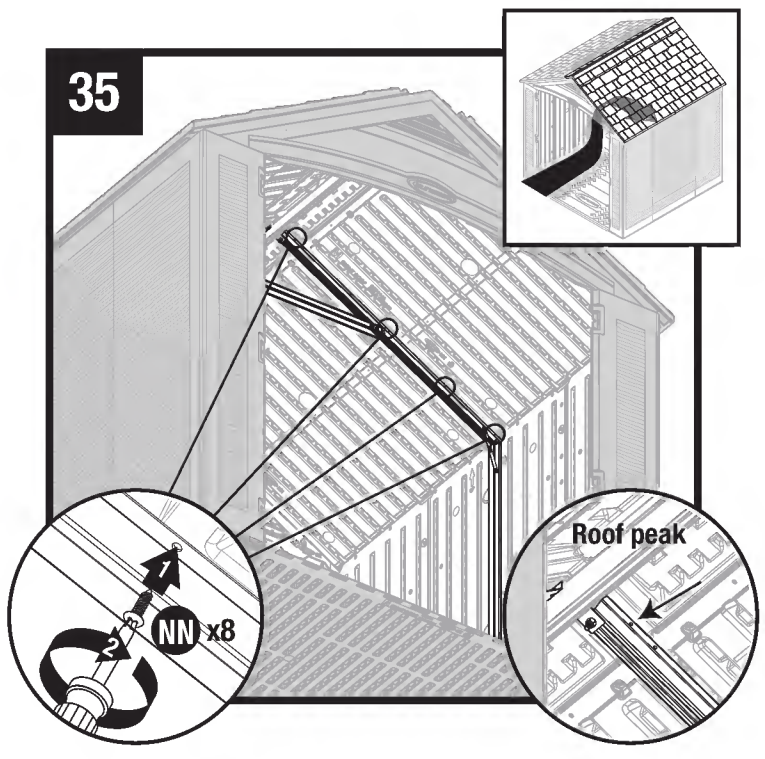


Secure the right side of the roof to both sides of right truss leg using 8 screws (**NN**). **Repeat** for the left side of the roof. **IMPORTANT:** The top set of screws secure the roof peak (**Q**) to truss.

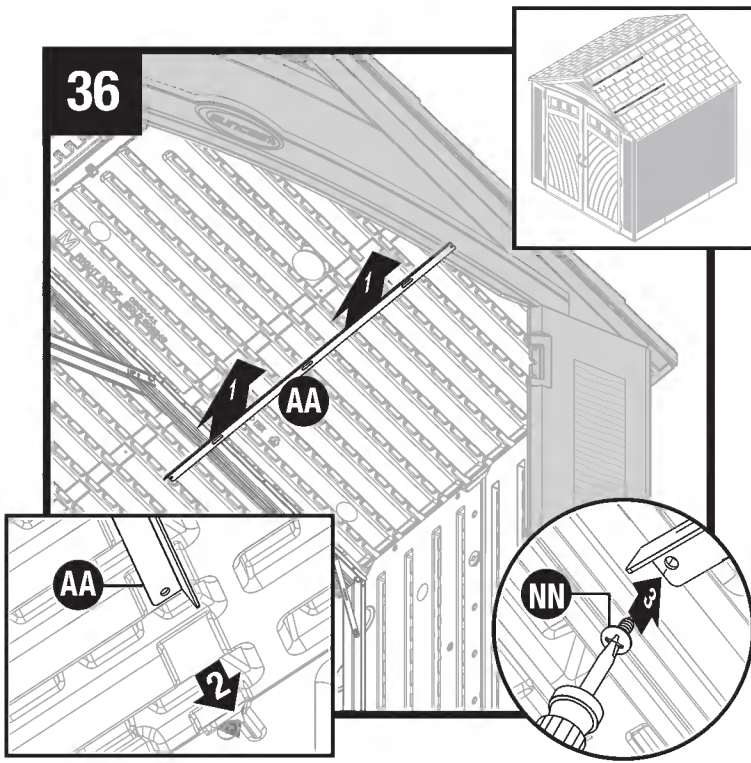


Raise L-bracket (**AA**) into position against middle of roof panel. Slide L-bracket (**AA**) into front header and secure to underside of truss leg with 1 screw (**NN**).

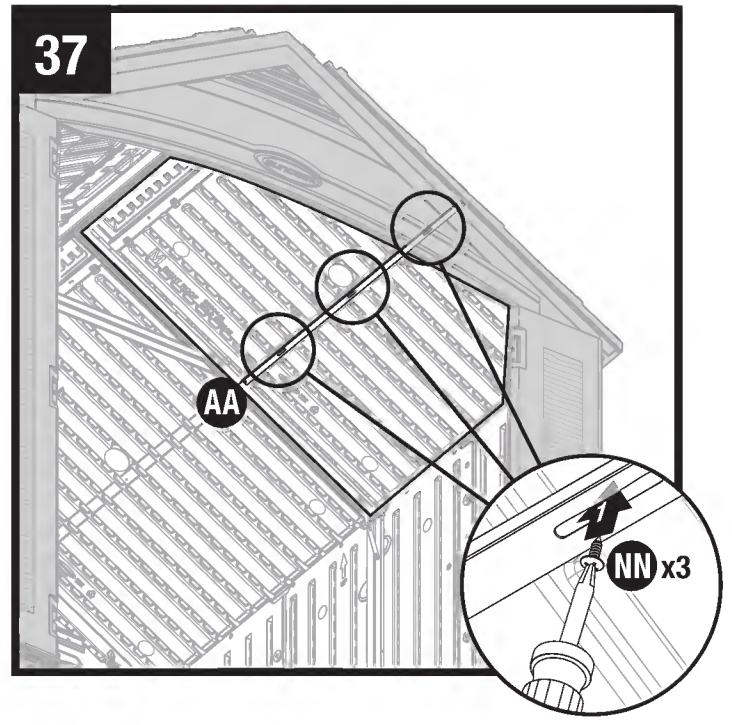

Continue to secure L-bracket (**AA**) to roof using 3 screws (**NN**).

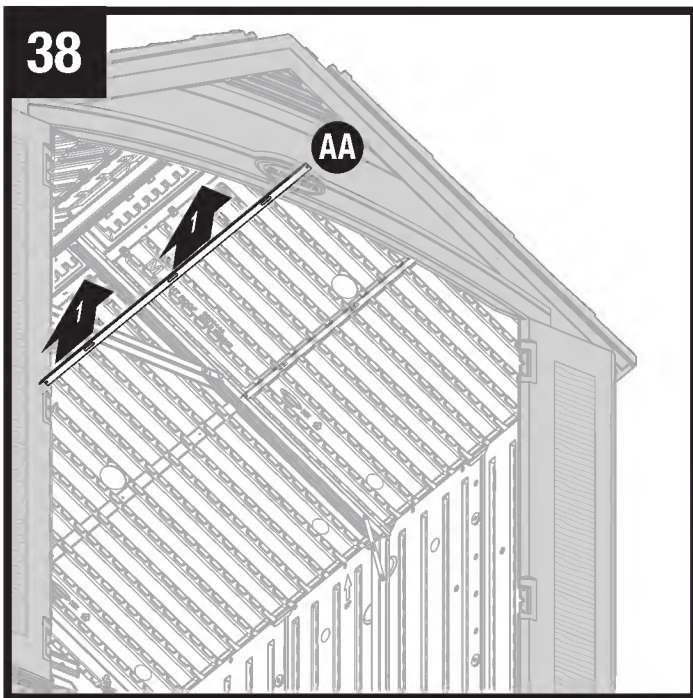


Repeat steps 36-37 to install an additional L-bracket (**AA**) at the top of roof panel.

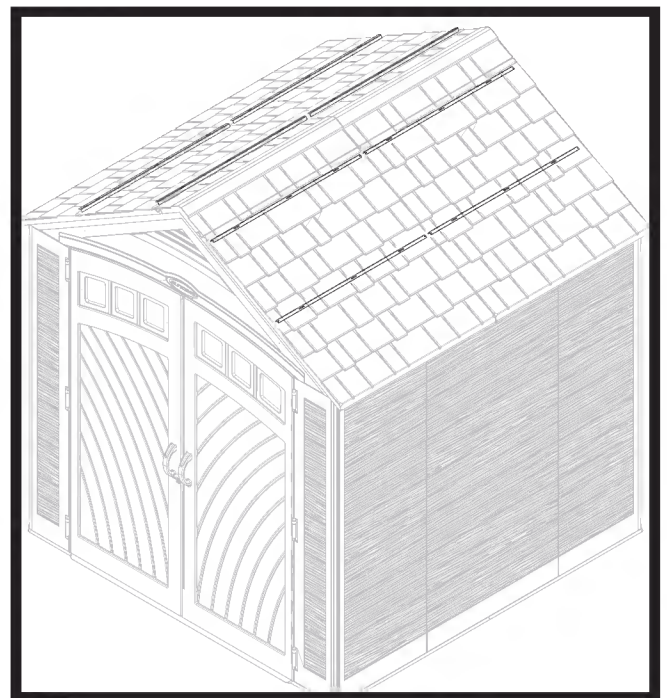


Repeat steps 36 -38 to install remaining L-brackets at the locations indicated.

Assembly - Doors

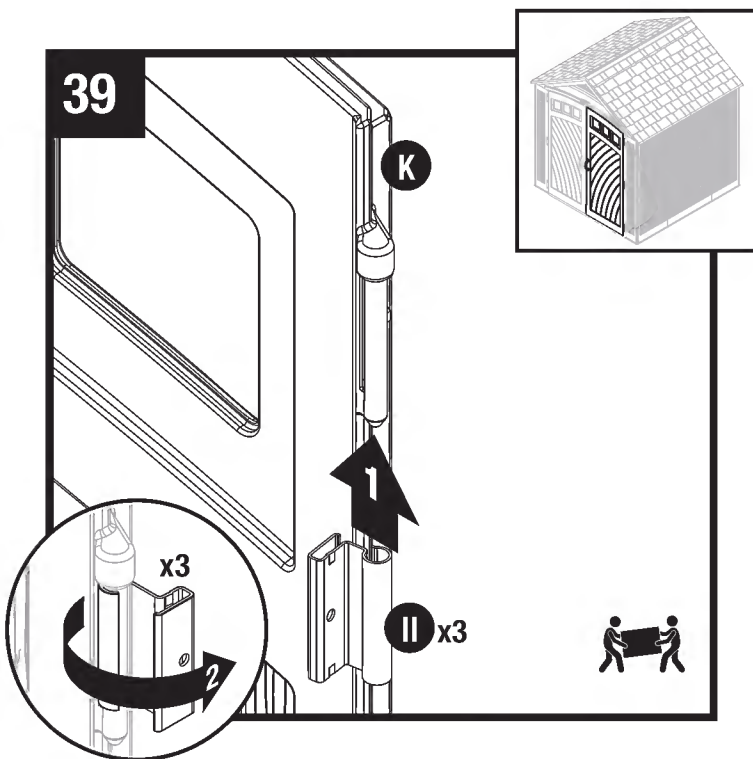


Stand right door (K) upright with three hinge mounts facing right. Slide 1 metal hinge plate (II) up onto each hinge mount. Rotate hinges to outside of door.

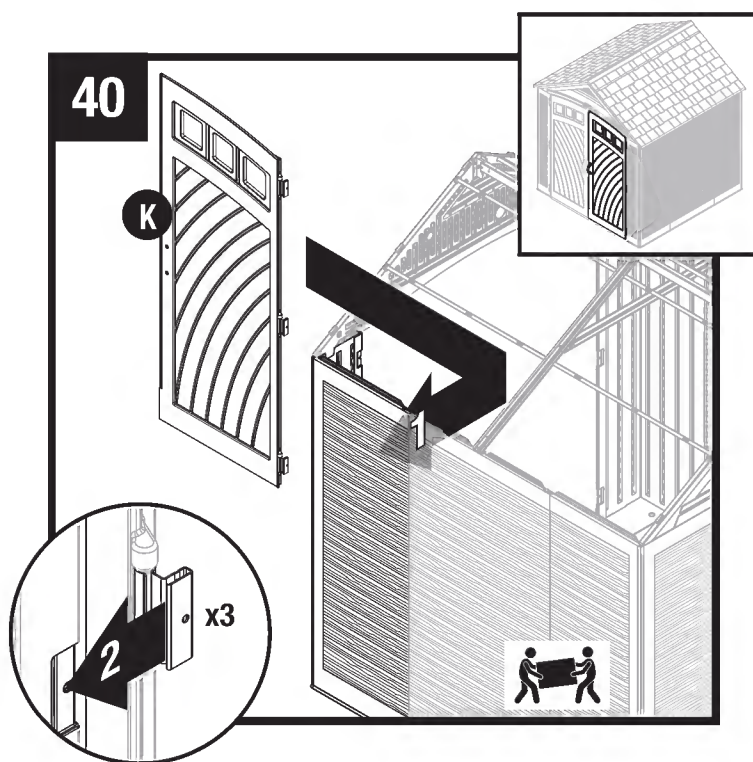


With metal hinge plates in open position, slide one hinge over each hinge receptacle on inside of right front panel.

Note: Use a rubber mallet if necessary.

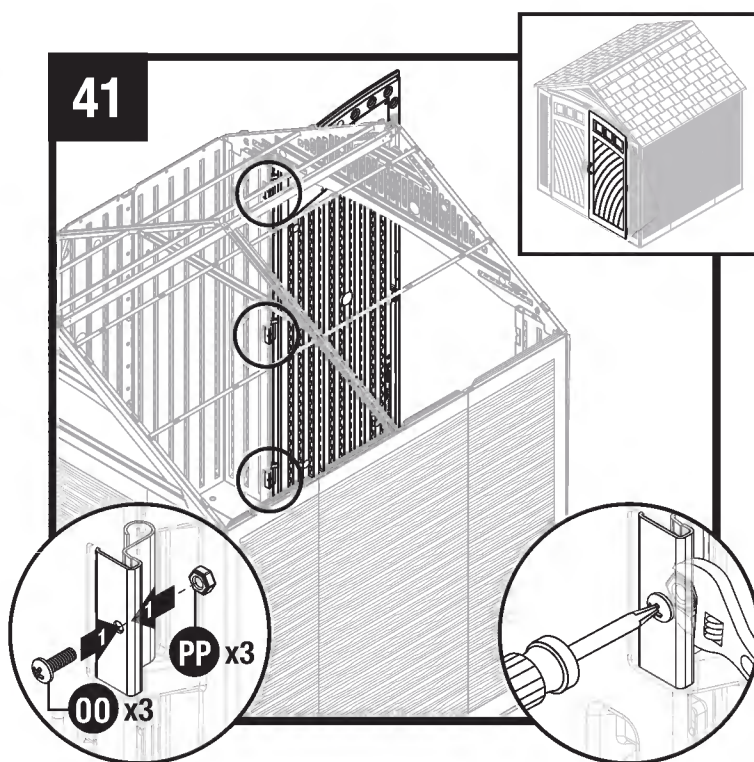


Secure each metal hinge plate with 1 screw (OO) and nut (PP).

Repeat Steps 39-41 for left door (J).

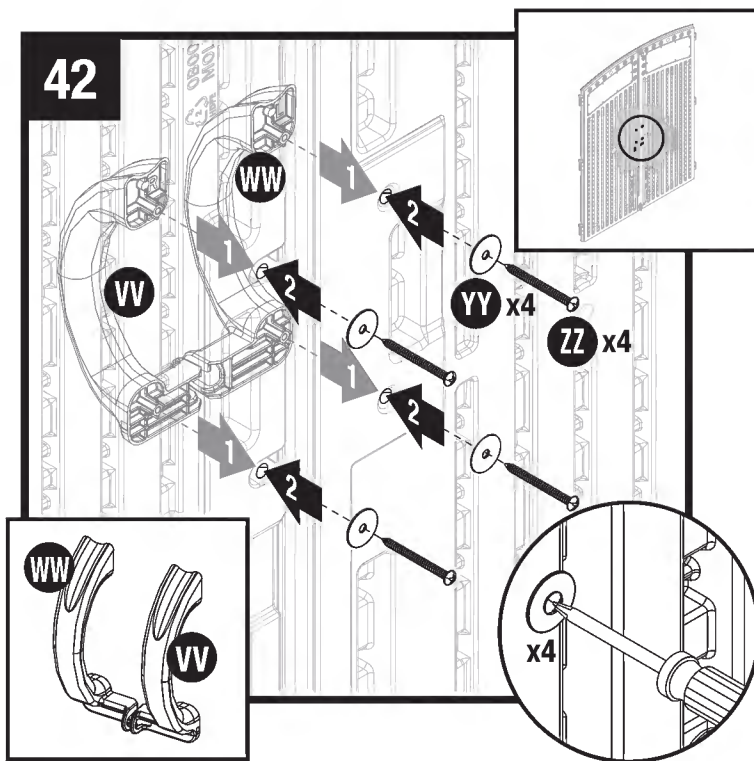

From the outside of doors, insert door handle (VV,WW) stems into holes of left and right doors. On inside of doors, place washers (YY) on each door handle stem, and secure each with 1 screw (ZZ).

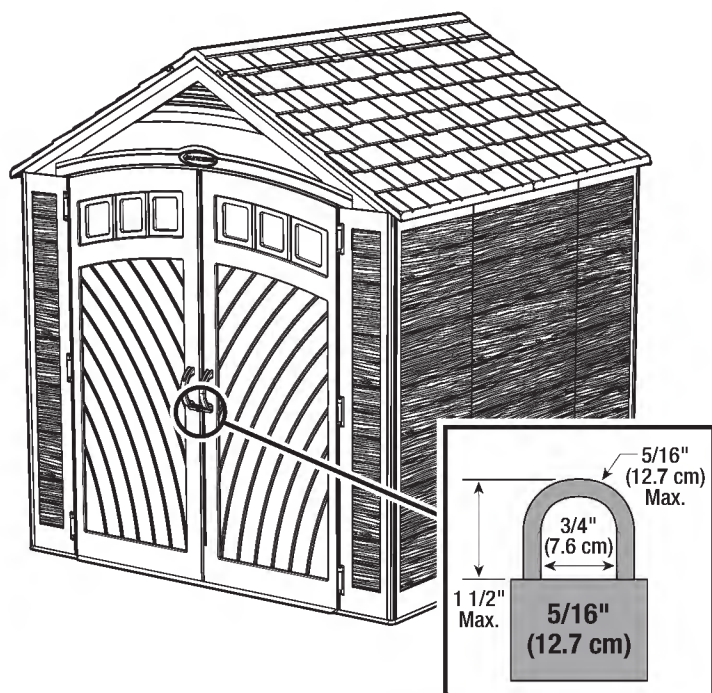

Attach a 5/16" padlock (not provided) to secure shed.

Note: To maintain warranty coverage, the product should be padlocked at all times when not in use.



The label located on the inside of the door contains information regarding your product. The QR code is a direct link to the product registration page on the Suncast website. The codes at the bottom of the label are specifically related to your product. Please have these numbers available should you need to contact Suncast.

