


**Trentvale 6x4 Apex Metal Shed** 

ASSEMBLY INSTRUCTIONS

## Green Lane, Wardle Nr. Nantwich, Cheshire, CW5 6BN www.rowgar.co.uk

Help Line: (Normal Office Hours) 01829 261 121 Email: support@rowgar.co.uk

# Light Grey: SS533 Dark Grey: SS534

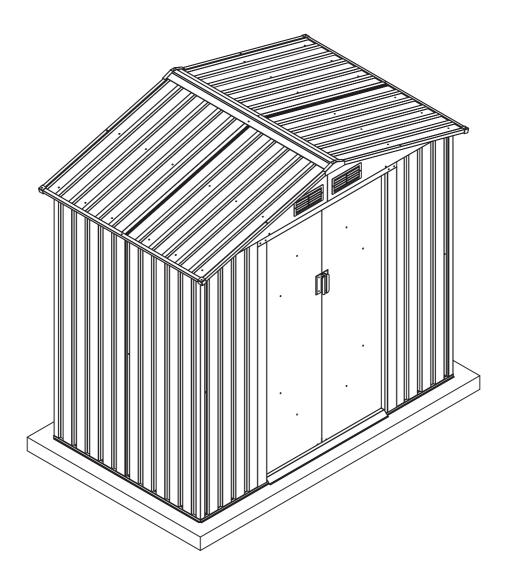

S1001A

Requires two people and takes 1-2 hours for Installation.

# **Assembly Preparation**

#### **Owner's Manual**

Please check local building codes regarding footings, location and other requirements before beginning construction.

#### Assembly instructions:

Reviewing all instructions and the appropriate information before you begin, make sure following the step sequence carefully for successful results.

#### **Flooring base:**

A good location for the storage building is a square and level area with good drainage. The base is not included in the kit which may need purchase separately or may construct a foundation and anchoring system of your own.

A strong plastic sheet (thickness: at least  $150\mu$ m) should be placed under the foundation to assist in reducing rising dampness from the soil, thus reducing condensation build up in the shed. Your storage building must be anchored to prevent wind damage. Once secured, it is highly recommended applying silicone along the inside of the base rail to minimize condensation.


#### **Parts and Parts List:**

Before you start, separate and identify all the parts and hardware to be sure that you have all the necessary parts for your building (refer to the Parts List Page).

If you find that a part is missing, please notify the seller within one week after receiving the product. Do not attempt to assemble the building if parts are missing because any building left partially assembled may be seriously damaged by light winds.

#### **Tools you need:**

( Please tear off the safety protection layer before the assembly, keep the part number label if needed )




### Safety must be put in the No. 1 position:


- 1. Select a dry and calm day for your assembly. Team works (Two or more people) are required during the assembly. It is also recommended to finish the assembly in a day to avoid damage to the product or missing of some small parts.
- 2. Wearing safety gloves, eye protection and long sleeves during the assembly to prevent injury. Pay attention to the sharp edge of some parts.
- 3. Children and pets are not allowed entering into the construction site.
- 4. Never concentrate your total weight on the roof of the building. When using a step ladder make sure that it is safe.


### **Care & Maintenance:**

- 1. Keep the shed clean with soft cloth, use water if necessary.
- 2. Keep the door tracks clear of dirt and other stuff that prevent them from sliding easily.
- 3. Clean the snow with necessary tools to make sure it is safe to enter into.
- 4. The shed is not made for living but storing stuff.
- 5. Please add some oil on the top and bottom door sliding channel to make door slides smoothly.

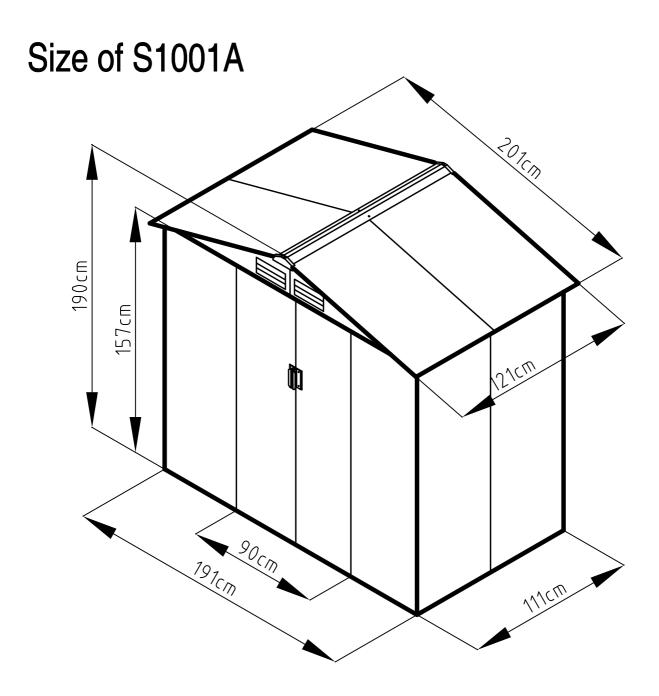

Area of installation requirement:

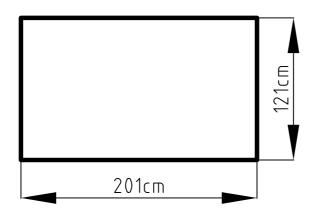

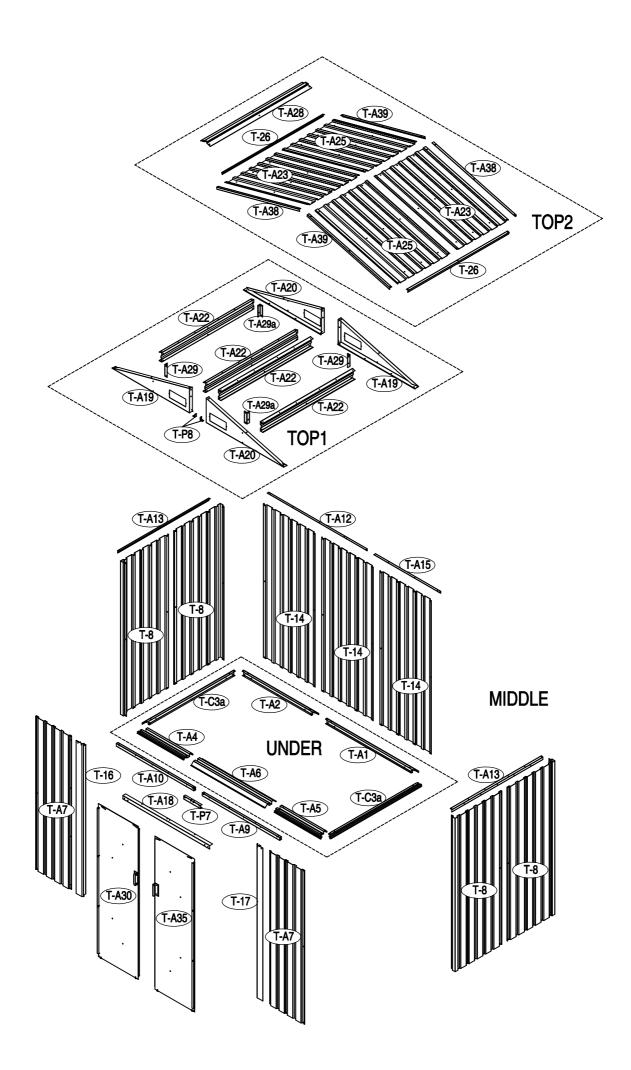

NO.	IMAGE	mm	QTY		NO.	IMAGE	mm	QTY
UNDER					T-31		1535	x2
T-A1		1102	x1	1	T-A32	1	836	x4
T-A2	·	902	x1		T-A33		456	x1
T-C3a		1102	x2		T-A34		456	x1
T-A4	J. T. T.	560	x1	1	T-A36		456	x1
T-A5		560	x1	1	T-A37		456	x1
T-A6		895	x1	1		ANNE	X	
MIDDLE				1	T-P1	ß		x4
T-A7		1600	x2	1	T-P2			x4
T-8	·	1600	x4	1	T-P3	⊗		x4
T-14		1600	x3	1	T-P4	Ø		x2
T-A9	1	932	x1		TP5A			x4
T-A10		932	x1		T-P6	Î		x2
T-A13	7	1096	x2		T-P7		200	x1
T-A12		1184	x1	1	T-P8	R R R R R R R R R R R R R R R R R R R		x2
T-A15		784	x1		T-A40	0		x128
T-16	٦ آ	1595	x1	1	T-A41	() <sup>m</sup>	ST4x10	x174
T-17		1595	x1	1	T-A42	() I	ST4x16	x16
T-A18	7	1040	x1		T-A43	J. S.	M4x10	x56
TOP 1					T-A44	Ø		x60
T-A19		932	x2					
T-A20		932	x2	1				
T-A22	}	1108	x4	1				
T-A29		120	x2	1				
T-A29a		120	x2					
TOP 2				]				
T-A23		1028	x2					
T-A25		1028	x2					
T-26	<b>Г</b>	1216	x2					
T-A38		1026	x2					
T-A39		1026	x2					
T-A28		1220	x1					
DOOR								
T-A30	0 0 0 0	1595	x1					
T-A35		1595	x1					

NOTE: It is important that these instructions are followed step by step.


Metal Shed must be installed on a level wooden platform or a level concrete foundation

Wooden platform is extra and is not included. Don't install under windy conditions. Wooden Platform The following are a list of lumber and sizes you will need.


Pressure Treated-Wood Studs: 50mmX101.6mmX1220mm.....(2) 50mmX101.6mmX1801.8mm....(3)


Exterior Grade (CDX-19mm) plywood 19mmX1220mmX2005mm.....(1)


We recommend to clear your metal shed of snow after each snowfall.

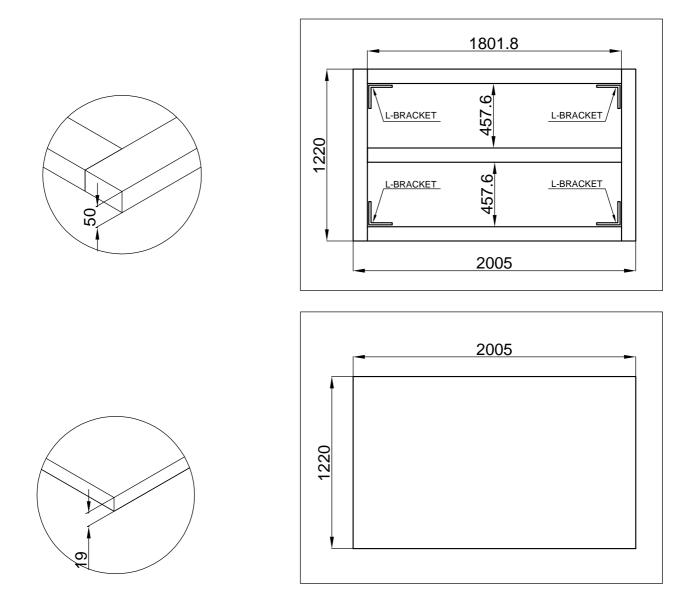



Important: Use hand gloves to prevent injury.

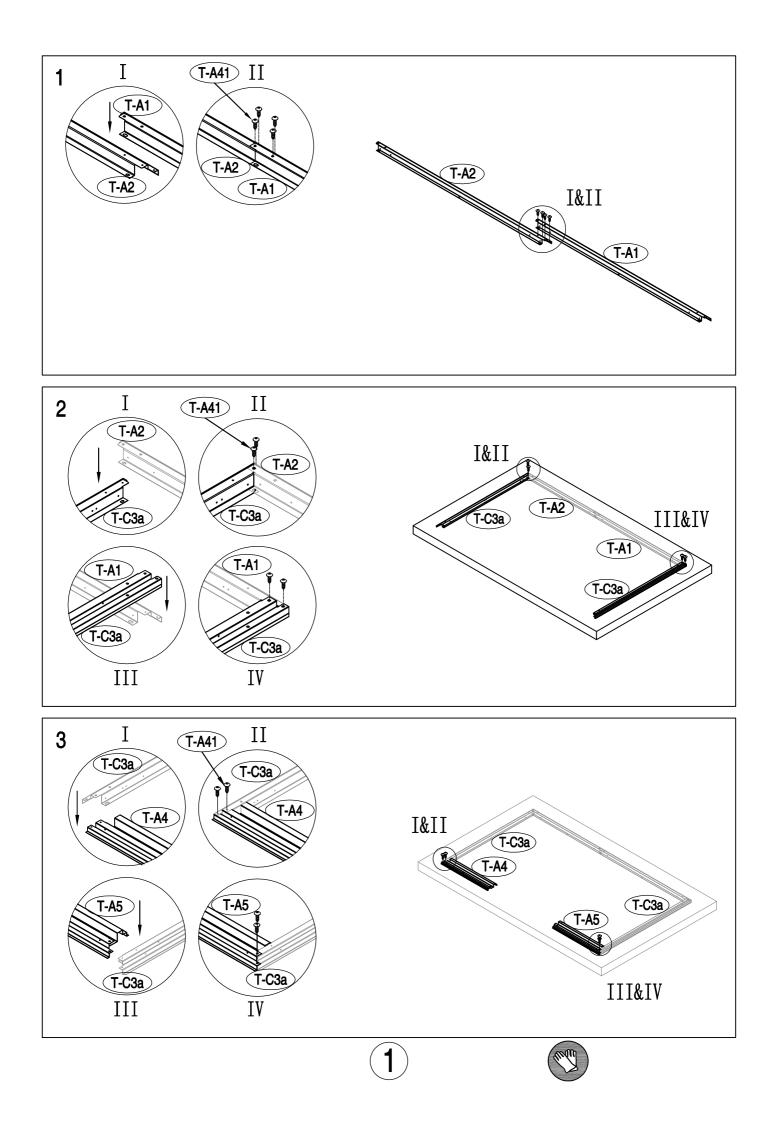


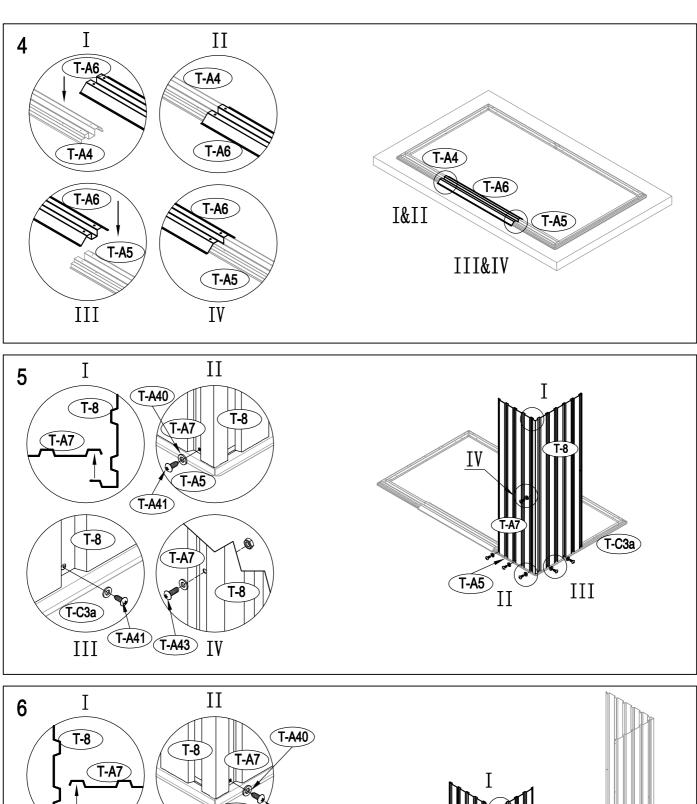


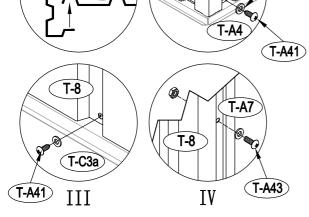


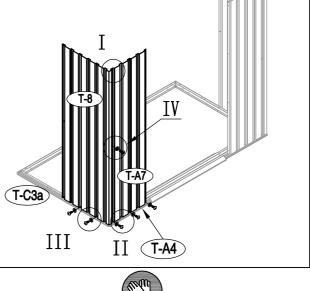

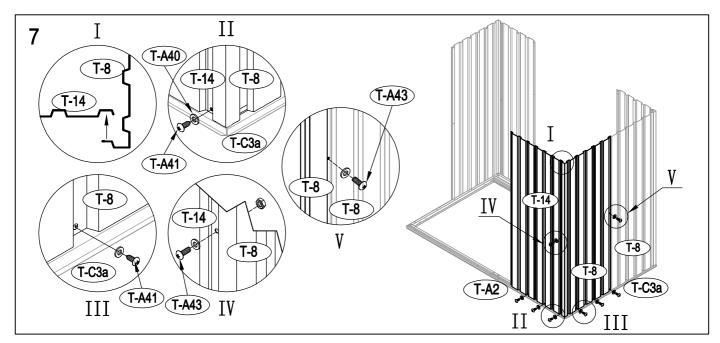

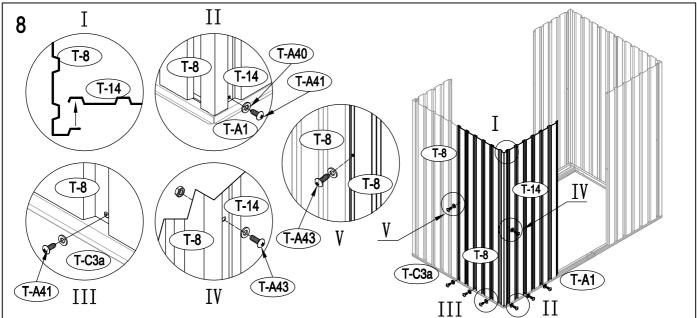

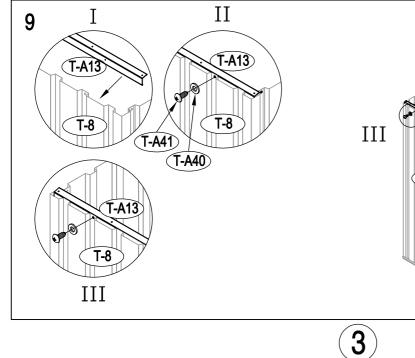

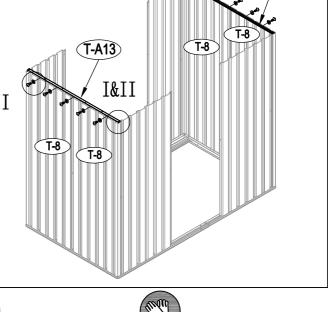

(T-A13)

